

# Dahua NVR connect PG camera

1、 Connect the camera to the computer, Download and install Hikvision search tool “SADP”.


Download:

<https://www.hikvision.com/en/support/tools/hitools/TS20200826033/?q=sadptool&position=2>




2、 Modify camera IP address.


Modify the IP address to be an address between 10.1.1.2---10.1.1.254 and the gateway is set to 10.1.1.1, Enter camera password.

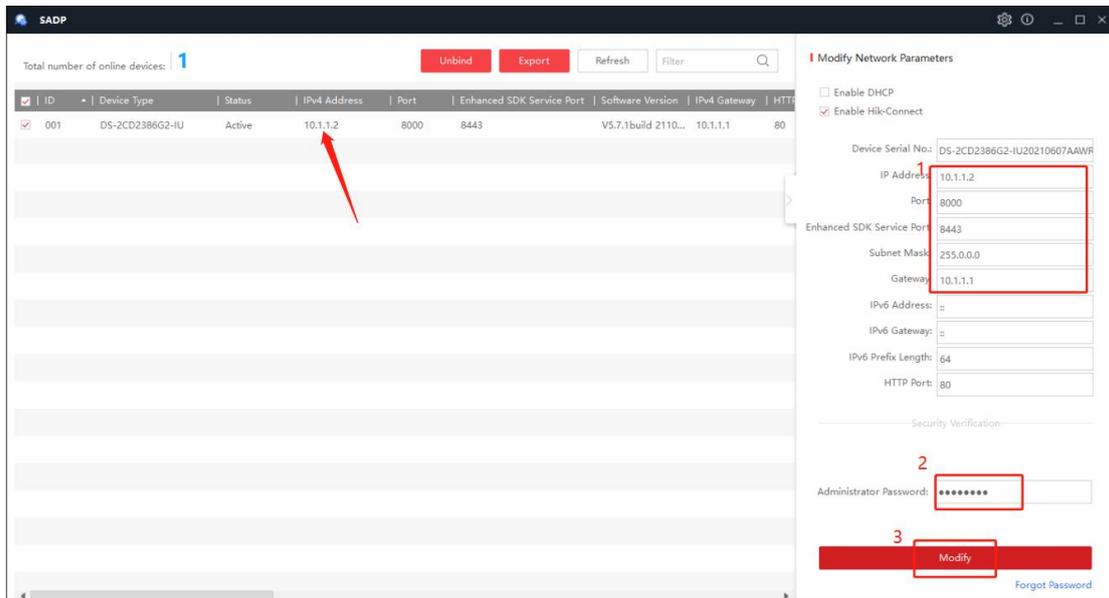

5、 Connect the camera to the POE port of Dahua NVR.

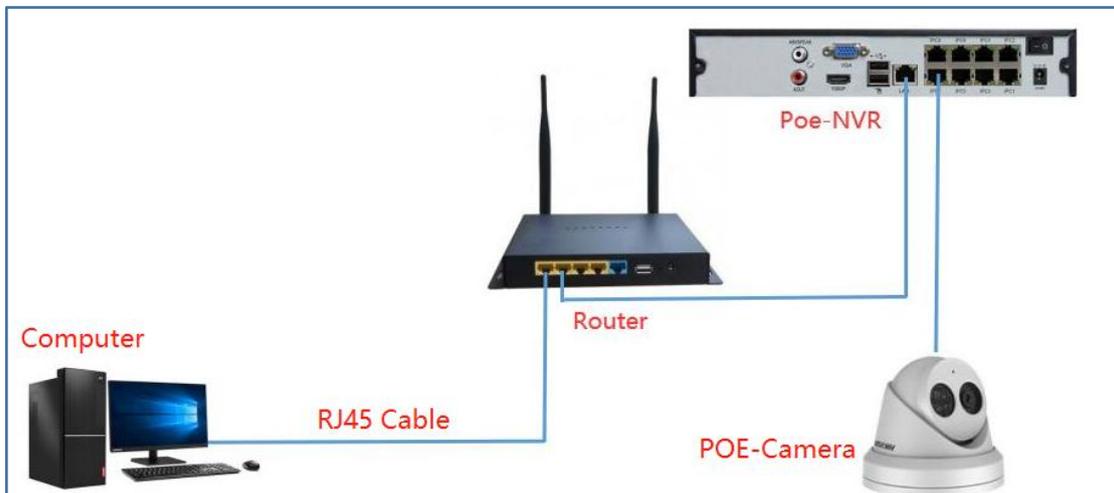

6、 Right mouse button--Main Menu -- CAMERA -- click "Manual Add" -- 1. Select the "Onvif" protocol -- fill in the camera's modified IP address -- 3. Fill in the camera's IP address, and click "Connect" -- click "OK".

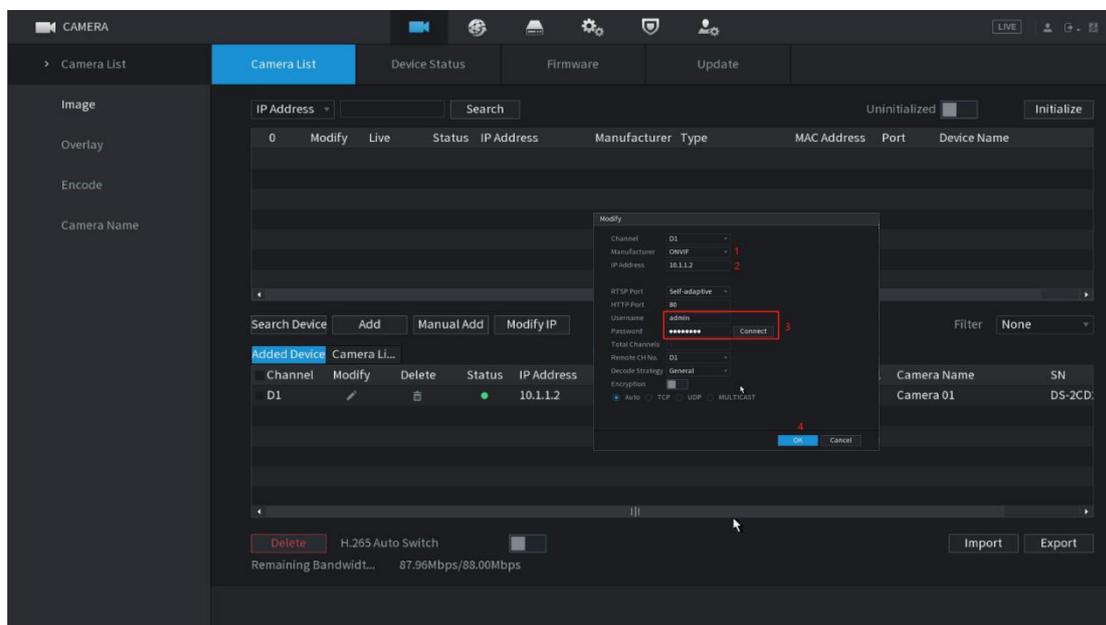

PS:When the camera status is displayed in green, the camera is successfully connected. If it is displayed in red, there is an error in the connection. Follow steps 1-5 to check whether the difference between the camera and the nvr is set correctly.