


FTP


1. open ftp server .setting and remember the ftp IP address ,port,username,password.(The FTP IP as same as computer IP.)

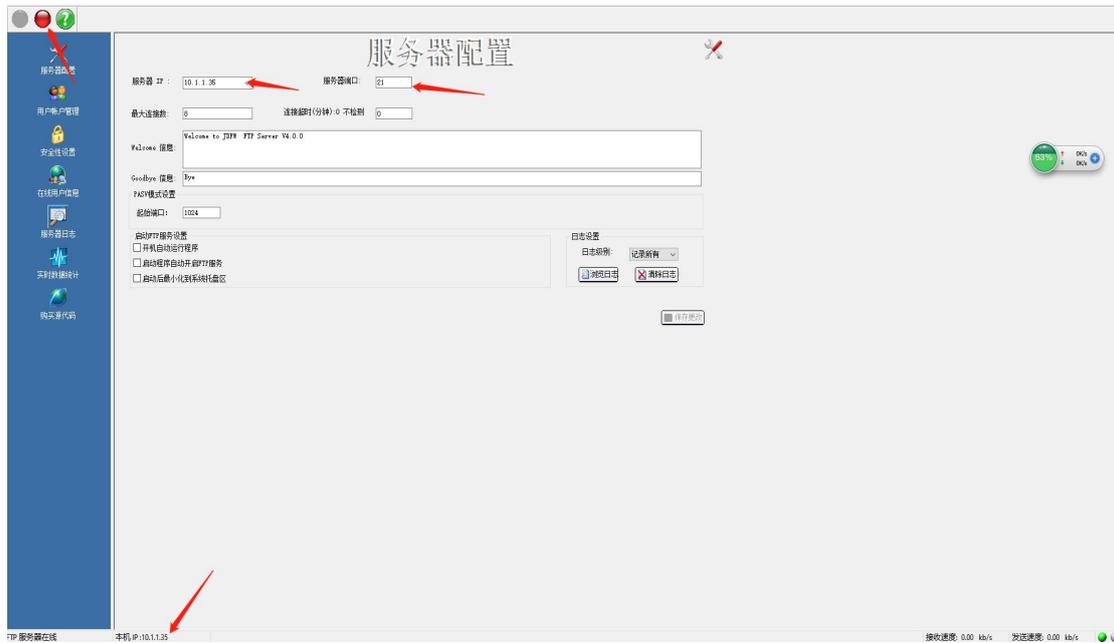


2. open the IE browser, enter the Dahua camera IP address and account password to log in.



3. Go to the main page and click "Setting - Event-Storage-Destination--path-FTP-Save"

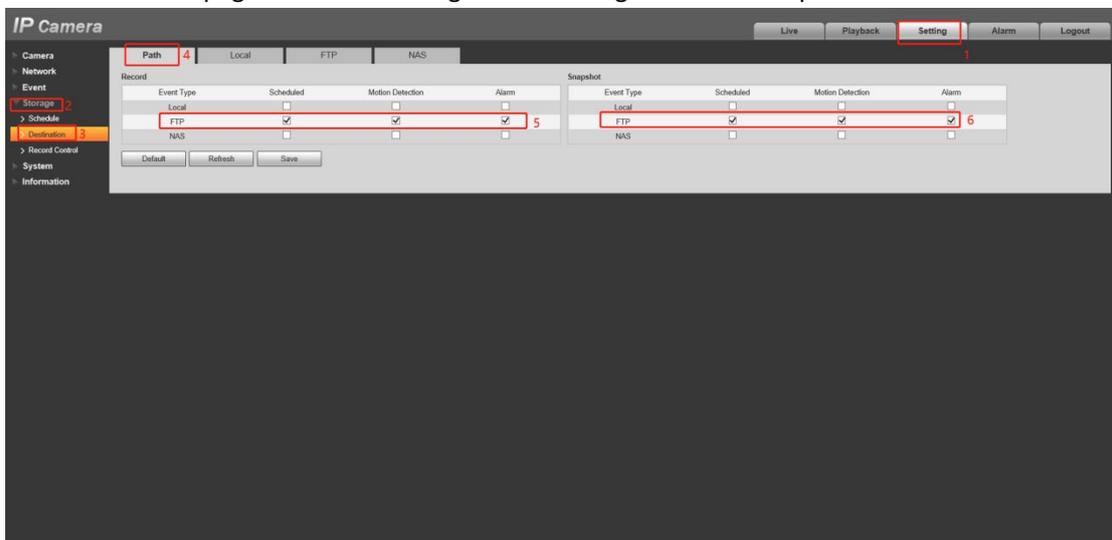

4. Open FTP and setting server.

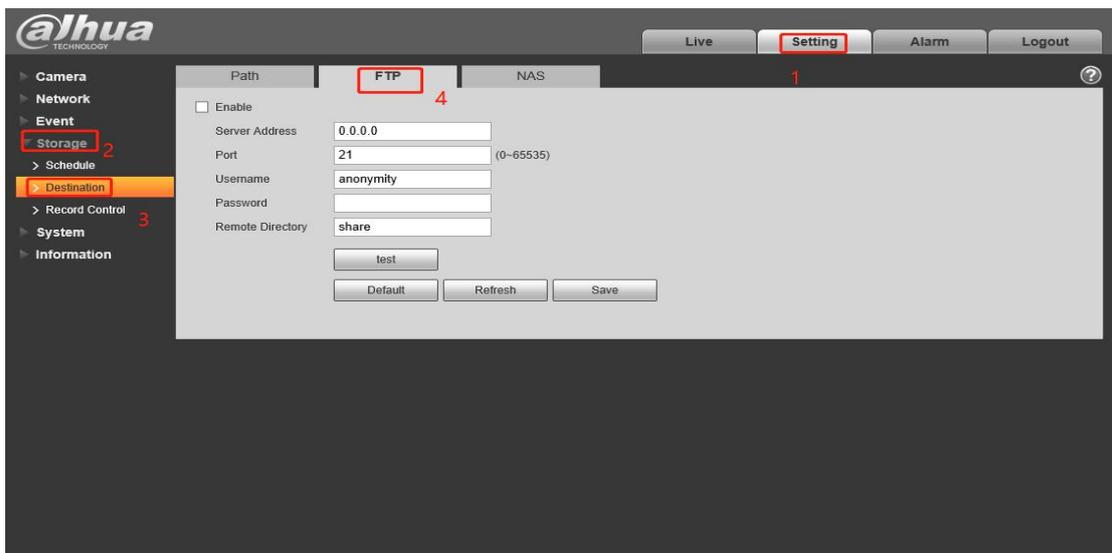

5.click the “Enble” and enter FTP information.save and test FTP. (Ps: Remember that you must click Save to test every time you modify the ftp data, otherwise the save will be unsuccessful.)

Path | **FTP** | NAS

Enable **1**

Server Address: 192.168.1.254

Port: 21 (0~65535)

Username: admin

Password: ●●●●●● **2**

Remote Directory: share

test **4**

Default Refresh Save **3**

FTP server test success.