

Add presets and cruise settings

1. Add preset point-adjust the camera to the preset point set, select add.



2. Turn on the cruise function-call the 98th preset position-complete the cruise on function.



- 41: Preset position cruise group 3 Support 1-16 preset points
- 42: Preset position cruise group 2 Support 17-33 preset points
- 43: Preset position cruise group 1 Support 34-42 preset points