

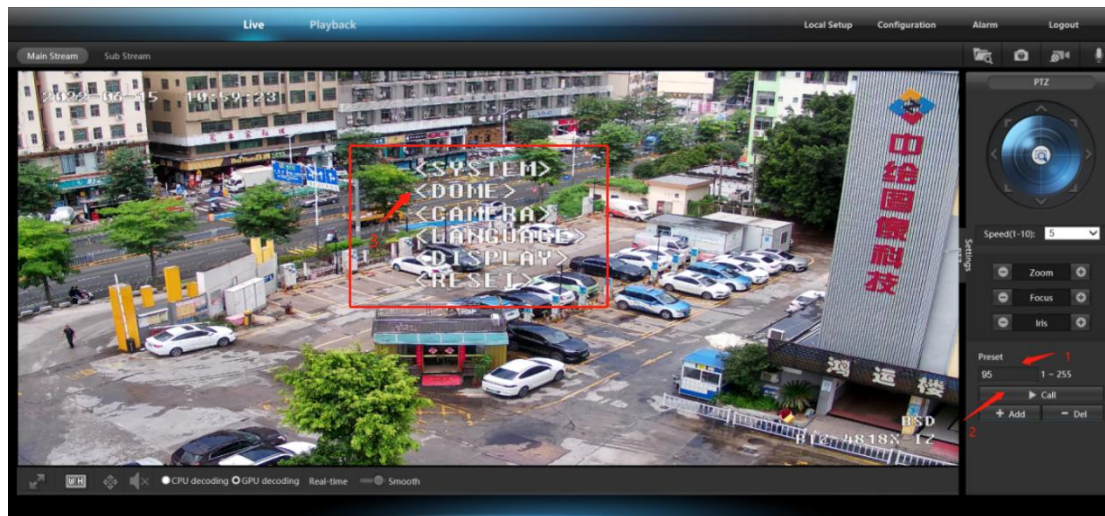


# Adjust cruising speed and dwell time

Step1: Enter 95---into DOME at the preset point

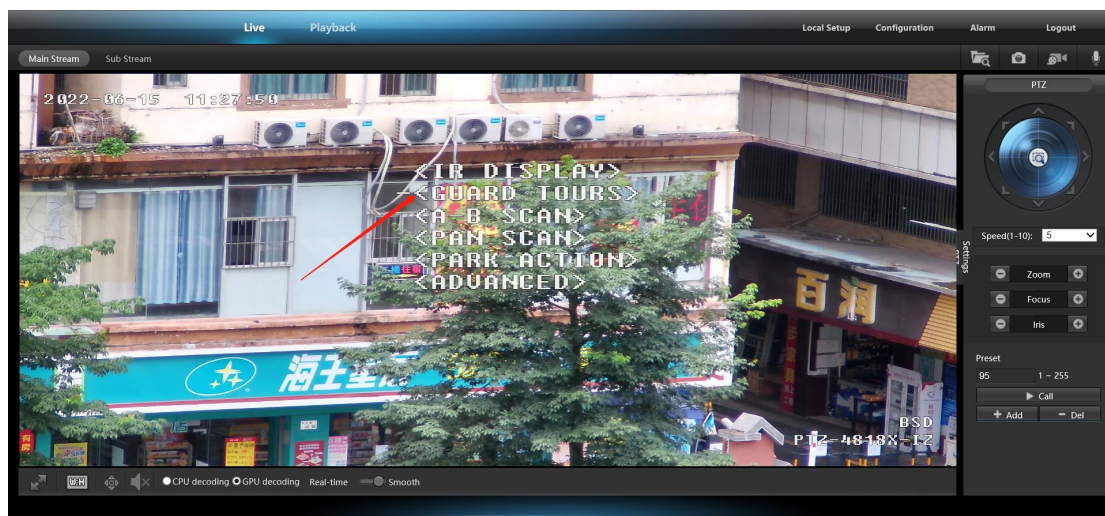

Step 2: The up, down, left, and right representations of the gimbal

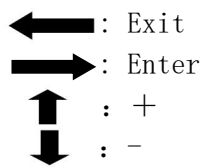




001: preset point

08: waiting time

64: switching speed

Note: just change the time and speed of the few presets you set.

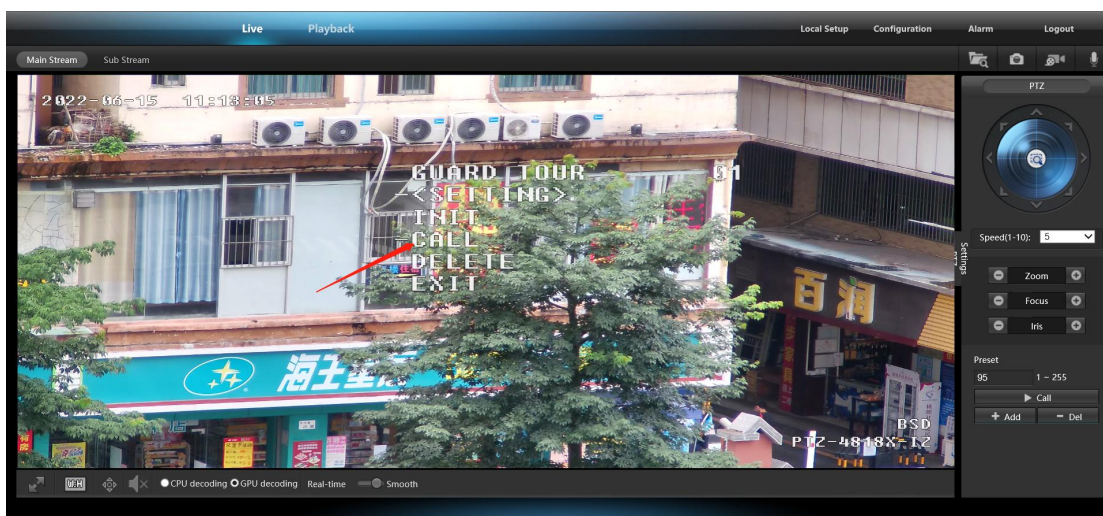

Time and speed are all set, take one step back---enter CALL to save

Note: be sure to save after changing the parameters.