## **Camera reset on Dahua NVR**

1. Open into NVR, click "Camera"



2. Find the camera settings that need to be restored to the factory, pay attention to the port name of the port 1, and then click

	SETTING	EN CAMERA ×									2022-08-1	7 14:29:41 Wed	1 ·	8 🖓
	CAMERA													->
		Camera List												
														Initialize
		All	All Not Initialized Not Auto Connected											
			4o. Live	Status		Address		Dev	ice Name	Manufac	turer		MA	C Address
		Added Device												
			Channel		Delete	Status	IP Address		Device Name.	Remote CH No	Manufacturer	Camera Name.	Webpage	Type
				1	â			Port	7.J01DB8P		Private	IPC	e	VD-2T41-AS
				1	ā								e	VD-2T41-AS
"Wabpage"														
wappage												_		

3. Open the camera and log in, click "Setting-System-Default-Factory Default"

IP Camera	Live	Blawback	Setting	Alarm	
	Live	Playback	setting	Alarm	Logout
Camera Default					
Network     Default     Other performations will be recommend to default assess reduced to default assess to hundrid.					
Event Detault Onlie comparators will be recovered to detaut except network in address, user management allo so on.					
Storage 4 Factory Default Completely recover device parameters to factory default.					
System 2					
> General					
> Account					
> Defense >					
> ImportForord					
> Auto Maintain					
Upgrade					
▶ Information					

4. Enter the password to restore the factory settings

			Live	Playback	Setting	Alarm	Logout
Camera Network Event Storage System Second	Default Default Default Default Default Completely recover device parameters to factory default completely recover device parameters to factory defa	pt nationals, IP addresses, user management and as on. of					
<ul> <li>Solidy</li> <li>Contract</li> <li>Contract</li> <li>Anali Materiani</li> <li>Anali Materiani</li> <li>Upgradi</li> <li>Upgradi</li> <li>Information</li> </ul>		Pactory Default	2				