


Chapter 3 Access to the Network Camera

3.1 Accessing by Web Browsers

3.1.1 Computer download and install the **AjDevTools** or **SADP** software tool.

Please refer to 2.1


3.1.2 After installation, open the software and click the **Start Search**.

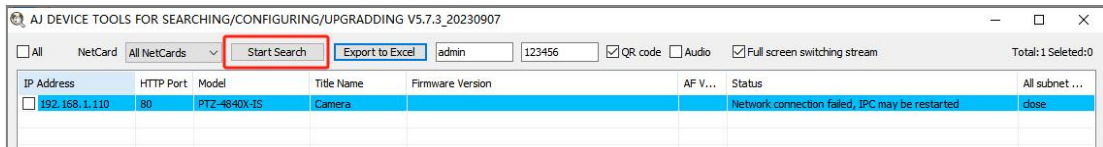


3.1.3 Modify the IP address of the camera to be consistent with the network segment of the PC

Setting method: ① Select the **IP address** of the camera;

② Click the **IP Batch Manual Setting** ;

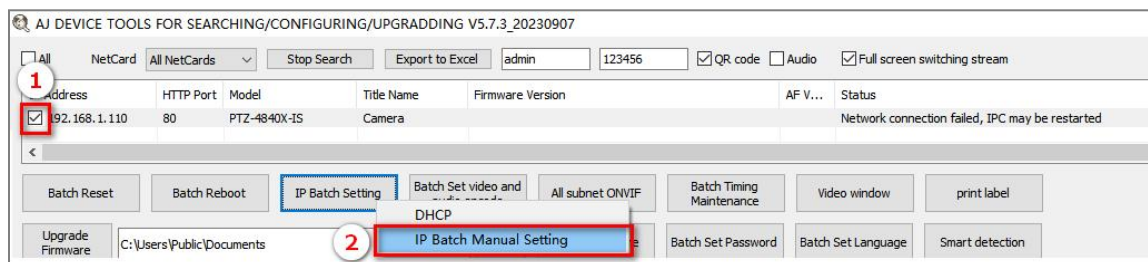


③ Modify the **IP address** of the camera to be in the same network segment as the **IP address** of NetCardr ;

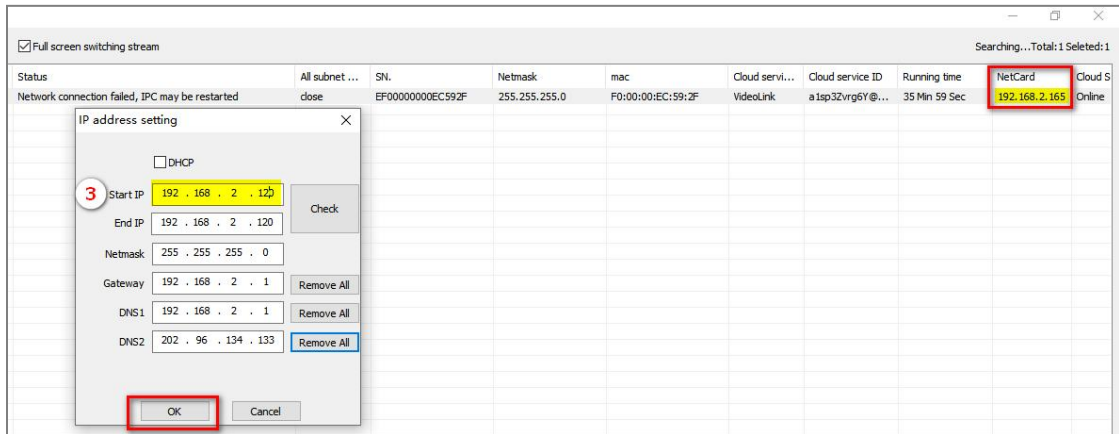

④ the Firmware Version display--Successfully modified;

IP Address	HTTP Port	Model	Title Name	Firmware Version	AF V...	Status
<input checked="" type="checkbox"/> 192.168.2.120	80	PTZ-4840X-IS	Camera	PTZ-4840X-IS_AF_V3-A_NH-RTMP-DH-H5 V3.2.4.9 b...		17:08:58 HumanAlarm

⑤ Click the **left mouse button** continuously to see the image of the cam

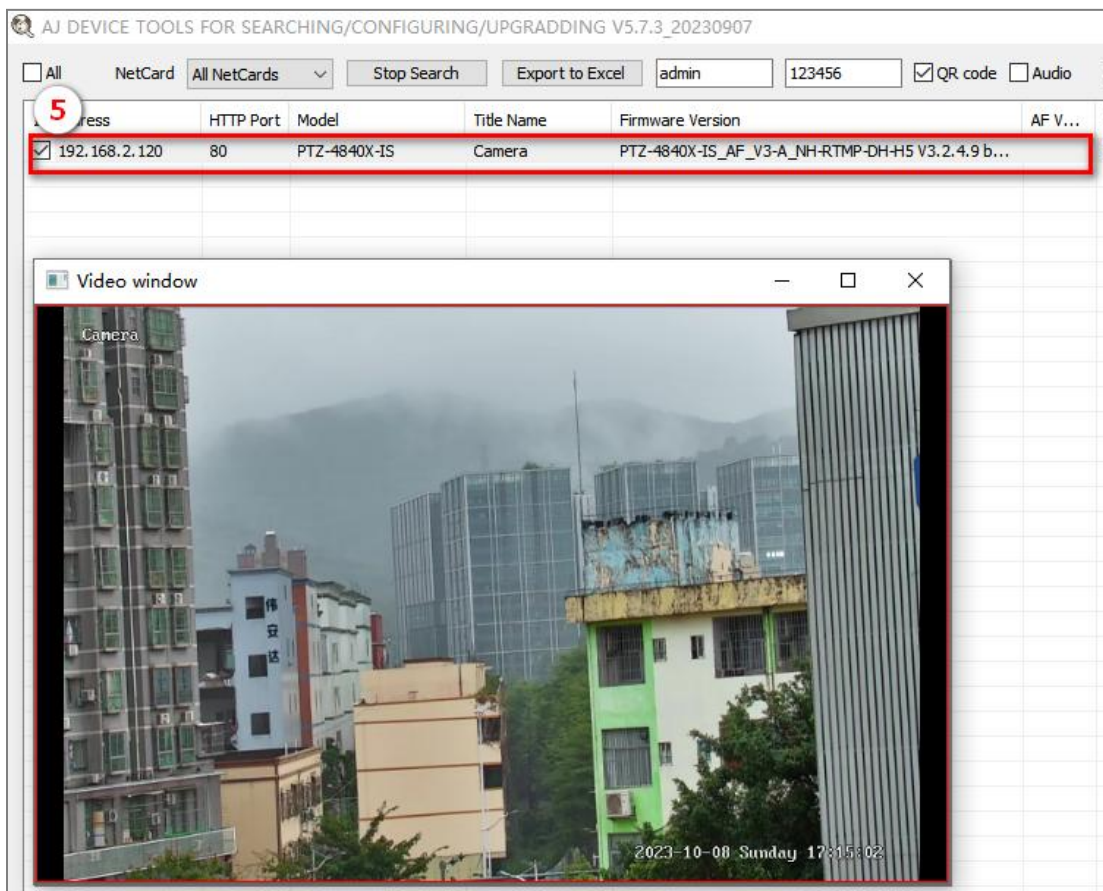

⑥ If you want to configure the camera,select the device and click the right mouse button, click to **Remote config** or **Open Web Page**

IP Address	HTTP Port	Model	Title Name	Firmware Version	AF V...	Status
<input checked="" type="checkbox"/> 192.168.2.120	80	PTZ-840X-IS	Camera	PTZ-840X-IS_AF_V3-A_NH-RTMP-DH+	5.13.2.4.9.b	17:09:55 Human disappear; video Human shape detected ...

- Open Web Page
- Login
- Remote config >
- Video window >
- One-click play
- Only Play Audio
- Stop playing
- Restart

6