



Computer access to camera and NVR web

A. Connect the camera

- (1) The camera is directly connected to the computer and provides DC12V power supply for it
- (2) Connect via POE switch
- (3) Connect via router

If you Need to use mobile APP remote control need to connect to the router

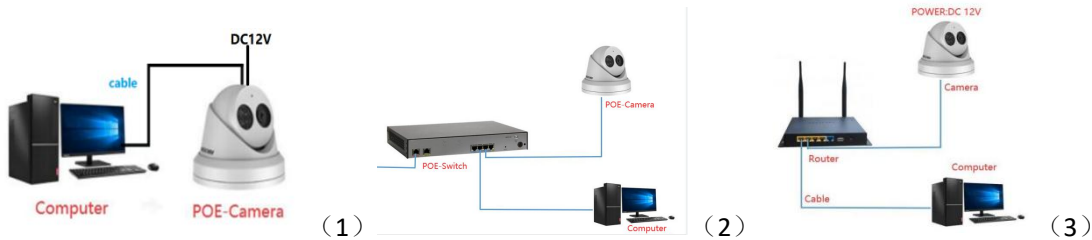

2 Download and open DAHUA search tool “config tool ”, search device IP address.(The camera Initial IP is 192.168.1.108)


Download:

<https://www.dahuasecurity.com/support/downloadCenter/tools?id=12&child=372>


The screenshot shows the DAHUA Configtool interface. The left sidebar contains navigation options: Modify IP, Device Upgrade, Device Config, System Settings, Password Reset, Building Config, and CGI Protocol. The main area displays a table with 1 device found. The table has columns for NO., Status, Type, Model, IP, MAC, Version, and Operate. The device listed is an IPC with IP 192.168.1.108. Below the table, there are checkboxes for Uninitialized and Initialized, and buttons for IPV4 and IPV6.

NO.	Status	Type	Model	IP	MAC	Version	Operate
1	Uninitialized	IPC	IPC-HDW2531TM-...	192.168.1.108	6c:1c:71:42:15:76	V2.820.000...	Edit Details Web

1. Activate the device. (Enter the email address, you can use it when you forget the password)

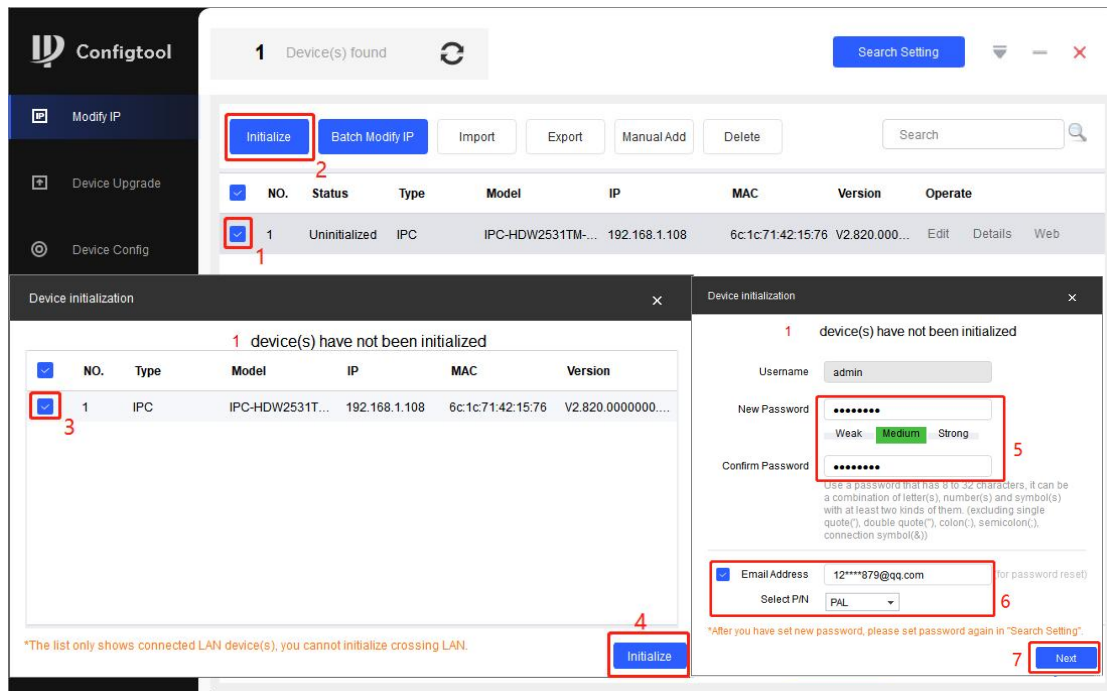

3. Search computer IP address. Enter “win+r” on the desktop. Remember the computer IP.

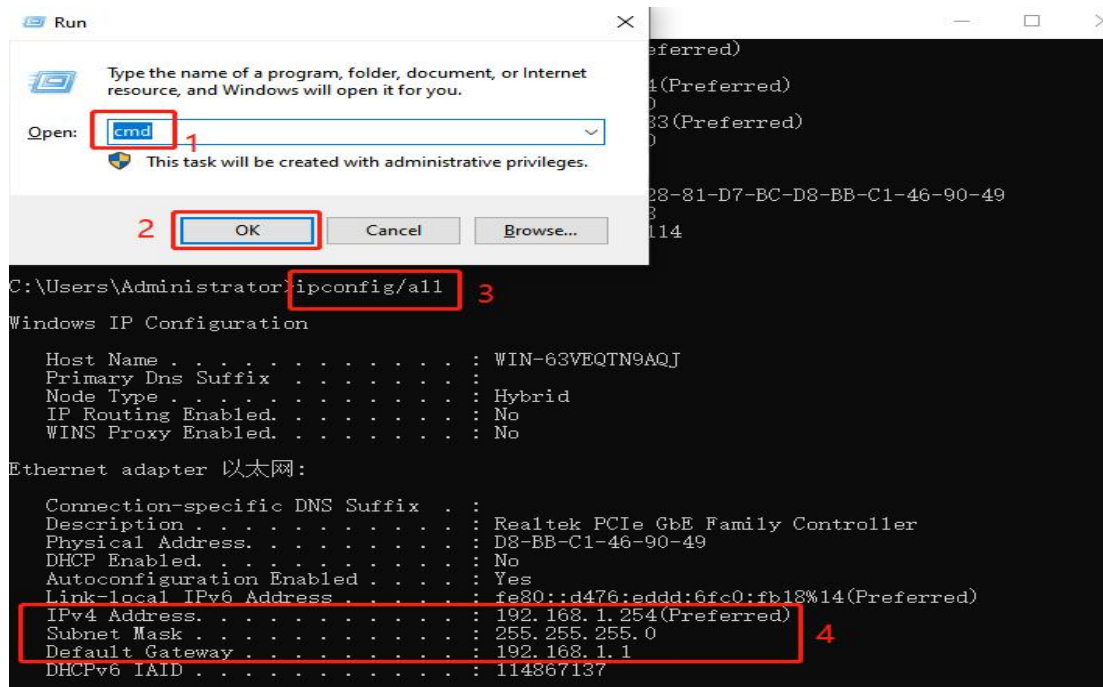

4. Modify camera IP address. The camera IP segment must be the same as computer IP segment (e.g: 192.168.1. "2-255").

1 Device(s) found

1 Search Setting

Initialize Batch Modify IP Import Export Manual Add Delete

NO.	Status	Type	Model	IP	MAC	Version	Operate
1	Initialized	IPC	IPC-HDW2531TM...	192.168.1.108	6c:1c:71:42:15:76	V2.820.000...	Edit Details Web

Setting

Current Segment Search Other Segment Search

Start IP: 192 . 168 . 1 . 1 End IP: 192 . 168 . 1 . 255

Username: admin Password:

2: The password as same as camera password.

3 OK

You have selected 1 device(s) Uninitialized Initialized

IPV4 IPV6

1 Device(s) found

6

Search Setting

Initialize Batch Modify IP Import Export Manual Add Delete

NO.	Status	Type	Model	IP	MAC	Version	Operate
1	Initialized	IPC	IPC-HDW2531TM...	192.168.1.108	6c:1c:71:42:15:76	V2.820.000...	Edit Details Web

1

Modify IP Address

Mode: Static 3 DHCP

Target IP: 192 . 168 . 1 . 128

Subnet Mask: 255 . 255 . 255 . 0

Gateway: 192 . 168 . 1 . 1

4: The camera ip segment as same as computer ip segment

5 OK

Selected number of devices: 1

You have selected 1 device(s) Uninitialized Initialized

IPV4 IPV6

5. Open IE browser , enter camera IP and Install plugin to log in camera web.

