


# Computer access to camera and NVR web

## A. Connect the camera

- (1) The camera is directly connected to the computer and provides DC12V power supply for it
- (2) Connect via POE switch
- (3) Connect via router

If you Need to use mobile APP remote control need to connect to the router



2 Download and open DAHUA search tool “config tool ”, search device IP address.(The camera Initial IP is 192.168.1.108)

Download:


<https://support.dahuasecurity.com/en/toolsDownloadDetails?id=590>

The screenshot shows the DAHUA Configtool interface. The left sidebar contains navigation options: Modify IP, Device Upgrade, Device Config, System Settings, Password Reset, Building Config, and CGI Protocol. The main area shows 1 device(s) found. The table below lists the device details:


NO.	Status	Type	Model	IP	MAC	Version	Operate
1	Uninitialized	IPC	IPC-HDW2531TM-...	192.168.1.108	6c:1c:71:42:15:76	V2.820.000...	Edit Details Web

At the bottom, there are checkboxes for Uninitialized and Initialized, and buttons for IPV4 and IPV6.

1. Activate the device. ( Enter the email address, you can use it when you forget the password )

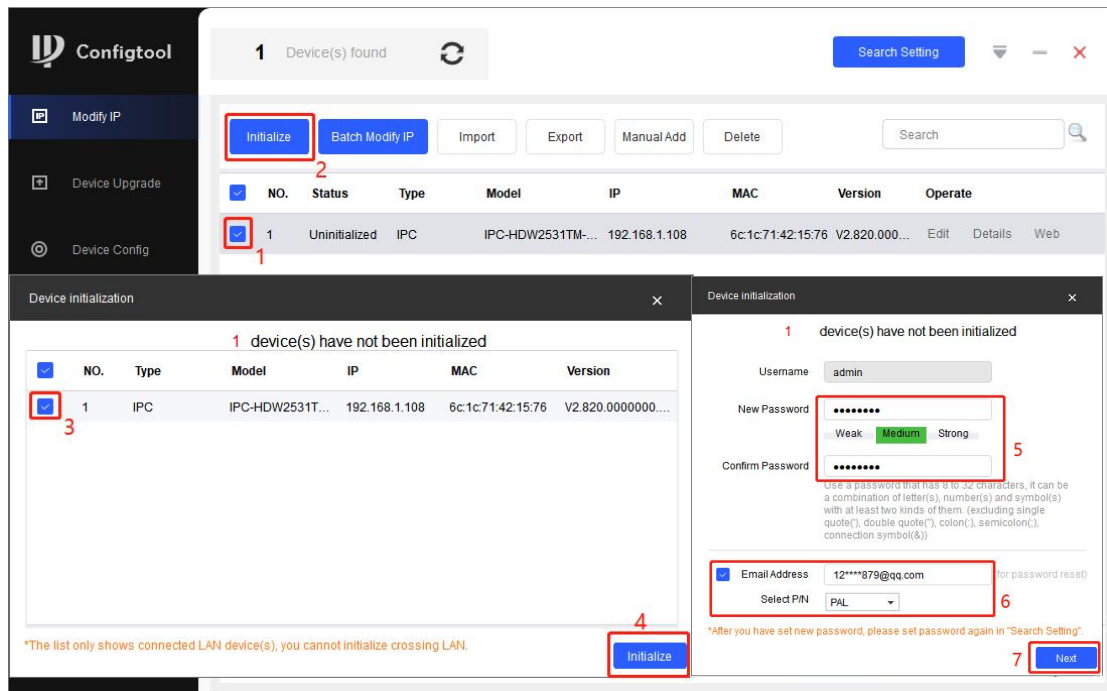

3. Search computer IP address. Enter "win+r" on the desktop. Remember the computer IP.

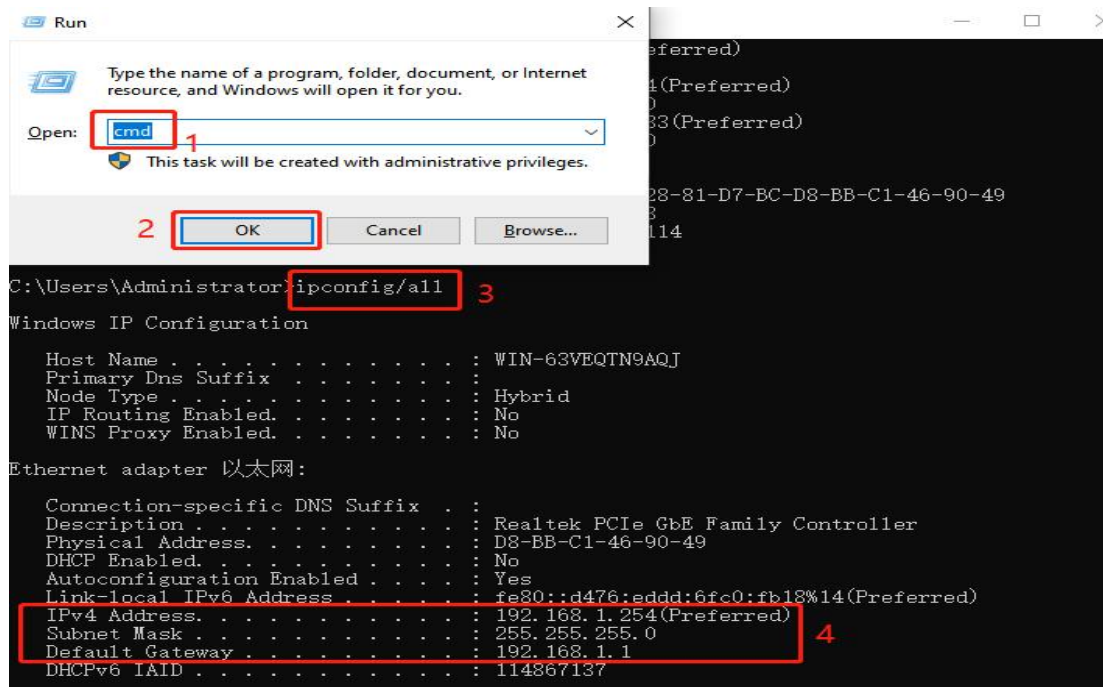

4. Modify camera IP address. The camera IP segment must be the same as computer IP segment (e.g.: 192.168.1. "2-255").

1 Device(s) found

1 Search Setting

Initialize Batch Modify IP Import Export Manual Add Delete

NO.	Status	Type	Model	IP	MAC	Version	Operate
1	Initialized	IPC	IPC-HDW2531TM...	192.168.1.108	6c:1c:71:42:15:76	V2.820.000...	Edit Details Web

Setting

Current Segment Search  Other Segment Search

Start IP: 192 . 168 . 1 . 1 End IP: 192 . 168 . 1 . 255

Username: admin Password: .....

2: The password as same as camera password.

3 OK

You have selected 1 device(s)  Uninitialized  Initialized

IPV4 IPV6

1 Device(s) found

6

Search Setting

Initialize Batch Modify IP Import Export Manual Add Delete

NO.	Status	Type	Model	IP	MAC	Version	Operate
1	Initialized	IPC	IPC-HDW2531TM...	192.168.1.108	6c:1c:71:42:15:76	V2.820.000...	Edit Details Web

1

Modify IP Address

Mode:  Static 3  DHCP

Target IP: 192 . 168 . 1 . 128

Subnet Mask: 255 . 255 . 255 . 0

Gateway: 192 . 168 . 1 . 1

4: The camera ip segment as same as computer ip segment

5 OK

Selected number of devices: 1

You have selected 1 device(s)  Uninitialized  Initialized

IPV4 IPV6

5. Open IE browser , enter camera IP and Install plugin to log in camera web.

