connect and access the camera

A: First, connect the computer and the camera to the same LAN (insert the same poe switch, or directly plug into the computer network port (the camera needs to be powered by a separate charger).



B: Go to Hikvision website to download SADP search tool



C: Search and activate the camera, the computer adds 192.168.1.x ip, so that the computer can access the camera

	SADP											¢\$0 _ [×
Tot	al numb	er of online devices: 6							Unbind	Export Device List	Refresh Filte	r C	2
	ID	↑ Device Type	Status	IPv4 Address	Port	Enhanced SDK Service Port	Software Version	IPv4 Gateway	HTTP Port	t Device Serial No.		Subnet Mask	I MA
		11.1	1000				-					- ^	ec-
	UUL	a general a	-				-	-	10.0	-		5 205.0	80
	003	DS-2SE4C425MWG-E	Inactive	192.168.1.64	8000	8443	V5.7.13build 230	192.168.1.1	80	DS-2SE4C425MW	G-E20230831AAW.	255.255.255.0	
		and the second second										0	f0-
C°.												25.25	f0-
4													•

A HAMPET LONG IN D	Advanced TCD/ID Setting
Internet 的议版本 4 (ICP/IPv4) Properties 2	K Mavancea ice/ie seconds
General	IP Settings DNS WINS
You can get IP settings assigned automatically if your network supports	IP addresses
this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.	IP address Subnet mask
Obtain an IP address automatically	
Use the following IP address:	
IP address:	2 Add Edit Remove
Subnet mask:	
Default gateway:	TCP/IP Address X -
Obtain DNS server address automatically	IP address: 3 192 . 168 . 1 . 254
Use the following DNS server addresses:	Subnet mask: 255 . 255 . 255 . 3
Preferred DNS server:	
Alternate DNS server:	4 Add Cancel
1	C Handhard Inclus
Validate settings upon exit Advanced	Incertace metric:
OK Cancel	5
· · · · · · · · · · · · · · · · · · ·	

Setting up tracking

1. Only the rules of the panoramic camera need to be turned on



Choose when you want to alert

		Live View		Playb	ack		F	Pictur	e		Appli	cation)(С	onfigu	ation		VCA	
8	VCA Resource	Intrusion Detection		Line Crossing Detection Region							Entrance Detection			Region Exiting Det			etection	ection	
1	Smart Event	Channel N	Channel No.		Camera 02				(Panoramic)			~							
	Smart Event 🗸 Enable																		
		Area Set	tings	Arming Sche		hedule	\rangle	Linkage Method		od									
		× De	lete	🛅 D	elete A	ai i													
		Mon	0	2	4	6		8	10	.,	12	14		16	18	20	22	24	
		Tue	0	2	4	6	А	8	10	d.	12	14	l a	16	18	20	22	24	
		Wed	0	2	4	6		8	10		12	14	- a.	16	18	20	22	24	
		Thu	0	2	4	6	Ĵ	8	10	÷.	12	14	<i>X</i>	16	18	20	22	24	
		Fri	0	2	4	6	a	8	10	A	12	14	4	16	18	20	22	24	
		Sat	o	2	4	6		8	10		12	14		16	18	20	22	24	
		Sun	0	2	4	6	1	8	10	×.	12	14	1	16	18	20	22	24	
			🖹 Sav	re															

Select the linkage action

	Live View Playback	k Picture	Application Configuration	VCA		
VCA Resource	Intrusion Detection Line (Line Crossing Detection Region Entrance Detection Region E				
Smart Event	Channel No.	Camera 02(Panoramic)	~			
	Area Settings Arming	Schedule > Linkage Method				
	Normal Linkage Normal Linkage Normal Linkage Normal Linkage Normal Linkage Audity Surveillance Cer Audity Surveillance Cer Auditie Warning	Card/	put Ingger Recording			
	😫 Save	•				

2. Turn on the ball machine tracking function (check the left to turn on the tracking function, and set the initial position of the ball machine, tracking time and tracking rate on the right)



!!!:

- 1、 Need to upgrade to the latest firmware 5.7.13 build 230614 first
- 2、 If Google Chrome does not display the VCA, you can use IE or Firefox