
Dahua camera resolution settings

1. Use the "Config Tool "to search for the camera IP, open the IE and log in to the camera web page.

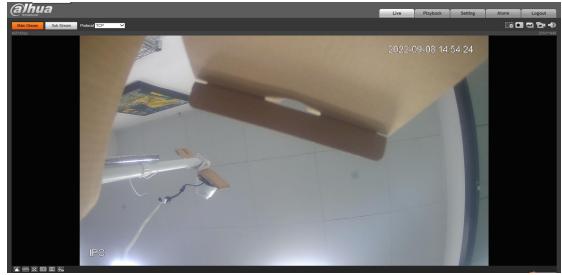

2. Click "Setting-Video-Ressolution", select the resolution, click "save" to apply.

