




Connect the camera directly to the computer

1. Connect the device, if the local connection is “”, Camera successfully connected. If the local connection is “”, Camera failed successfully.


2. Download and open DAHUA Search Tool "Config Tool. The initial IP of Dahua Camera is **192.168.1.108**.


If the device is not found, ping the IP of the camera from the computer, enter cmd in [Run] and confirm, then enter ping+device IP+space+t (e.g. 192.168.1.108 -t), if a data response can be generated, the connection is successful.

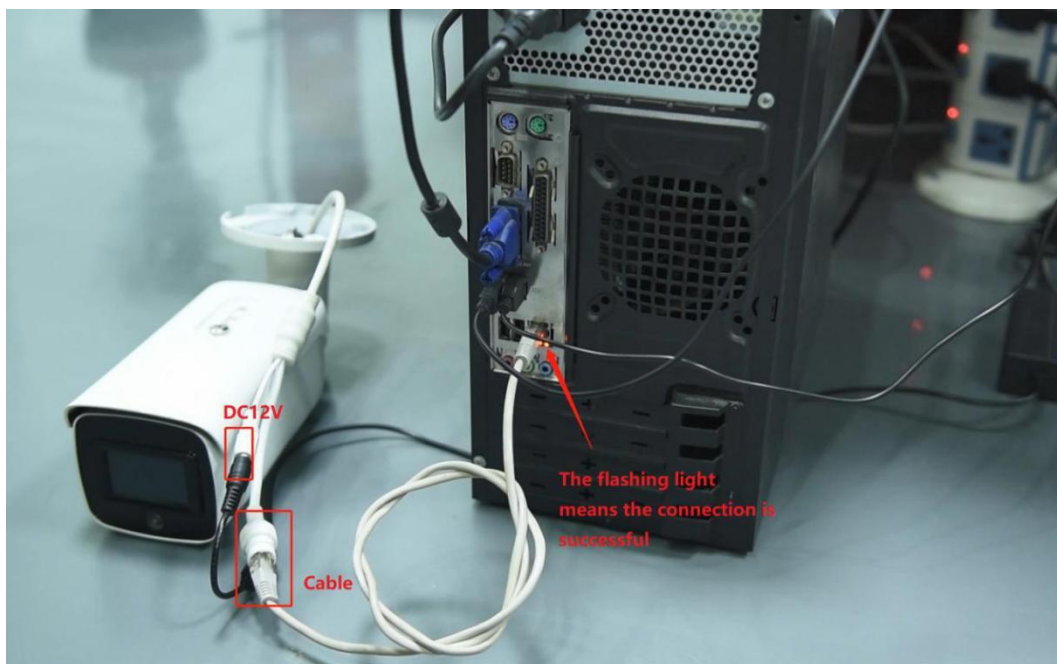


Download:

<https://www.dahuasecurity.com/support/downloadCenter/tools/MaintenanceTools?child=332>

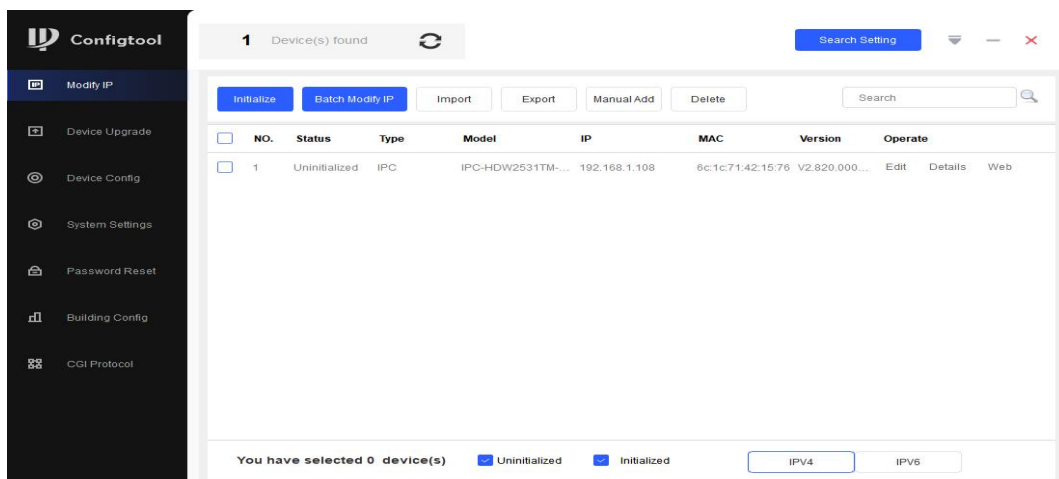


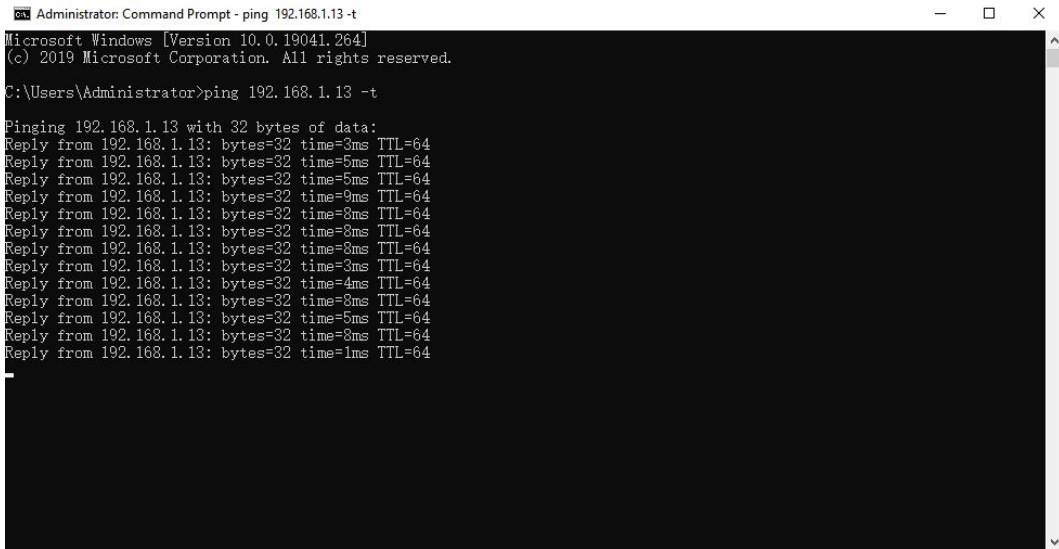


3. Set the computer IP, set the computer to obtain manually, and change the computer network segment to the same network segment as the camera.

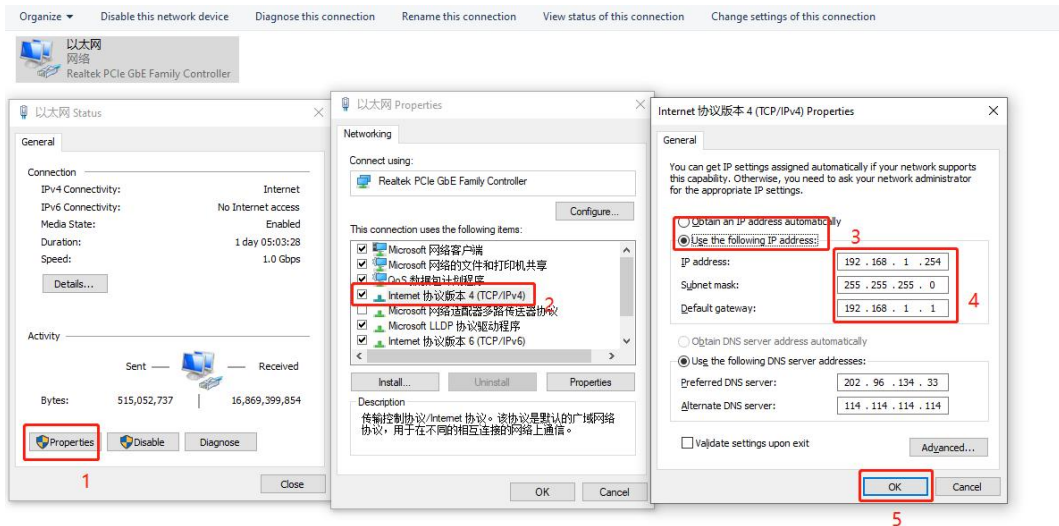

4. To activate the device, you need to modify the password of the camera (the password of the camera when it is activated), and modify the IP address of the camera, and then click the "web" behind the camera IP address to enter the camera web page.

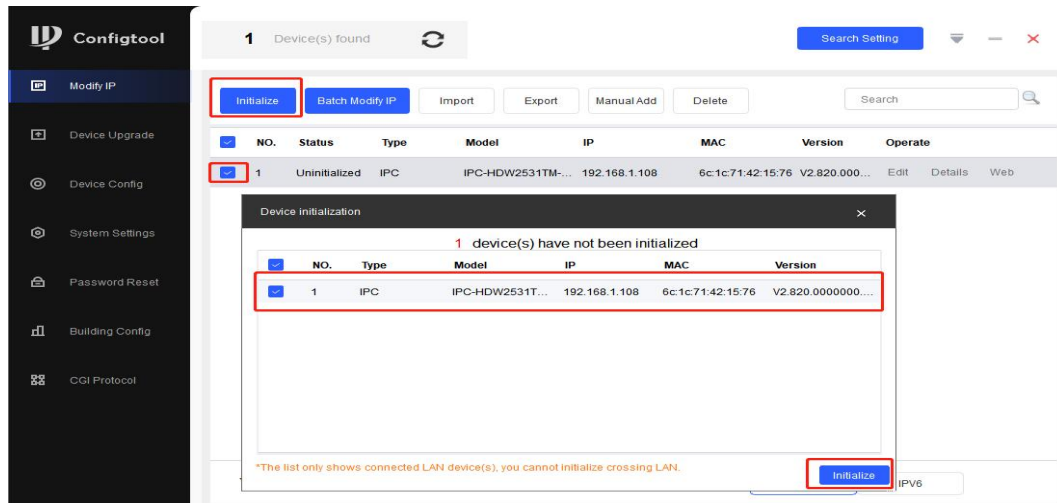

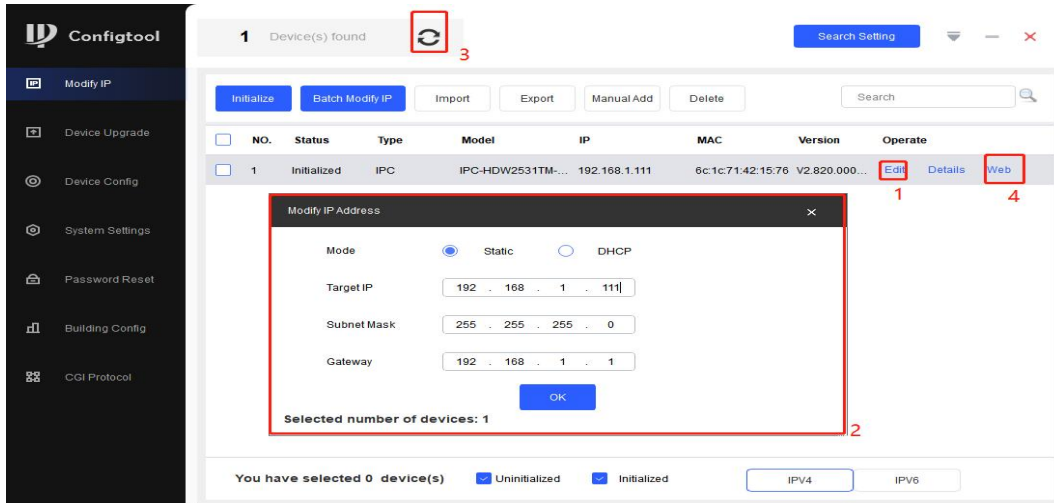

5. Open the IE browser, log in to the camera webpage, and click to download the plug-in.

