

# Firmware Upgrade

1. Log in to the Dahua camera, enter the main interface of the camera, click "setting-system-upgrade", click "browse", select the upgrade firmware file .(ps: must be the uncompressed bin file, click upgrade.)



2. After the upgrade, the camera will restart and reactivate. When you enter the upgrade firmware interface, you can see whether the firmware is upgraded.

