## DAHUA NVR installation hard disk and recording settings

1. Installing the sd card into the camera.





2. Log in to the camera web page.click"Setting - Storage - Destination -Local". Select sd card and click Format.

AND DESCRIPTION OF					_						
Concernance of					Live	Playback	Setting	Alarm	Logout		
▶ Camera	Path	Loca	il 👘	FTP	NAS						
Network	Name	Status	Attribute		Used Capacity/1	lotal Capacity		File System	Grade		
Event 2	Disk1	General	Read & Write	-	64.9	M/29811.7M		FAT32	U3 ^		
T Storage					1						
> Schedule					5						
> Destination											
> Record Control											
System 3								6			
Information											
									· ·		
	Read Only	Read & Write	Hot Swap	Refresh					Format		

3. open the overwrite, When the hard disk recording is full, the system will automatically overwrite the oldest video.

Select record mode.Tick "Auto" at the main stream and sub-stream.

danama.		Live	Playback	Setting	Alarm	Logout
Camera	Record Control					
<ul> <li>Network</li> <li>Event</li> <li>Storage</li> </ul>	Pack Duration         8         Min. (1~120)           Pre-event Record         2         s (0~2)					
Schedule     Destination	Disk Full Overwrite					
Record Control     System	Record Stream  Main Stream	4				
▶ Information	Default Refresh Save					