



Dahua Motion Detection setting

1. Open IE browser ,enter camera IP to log in camera web.

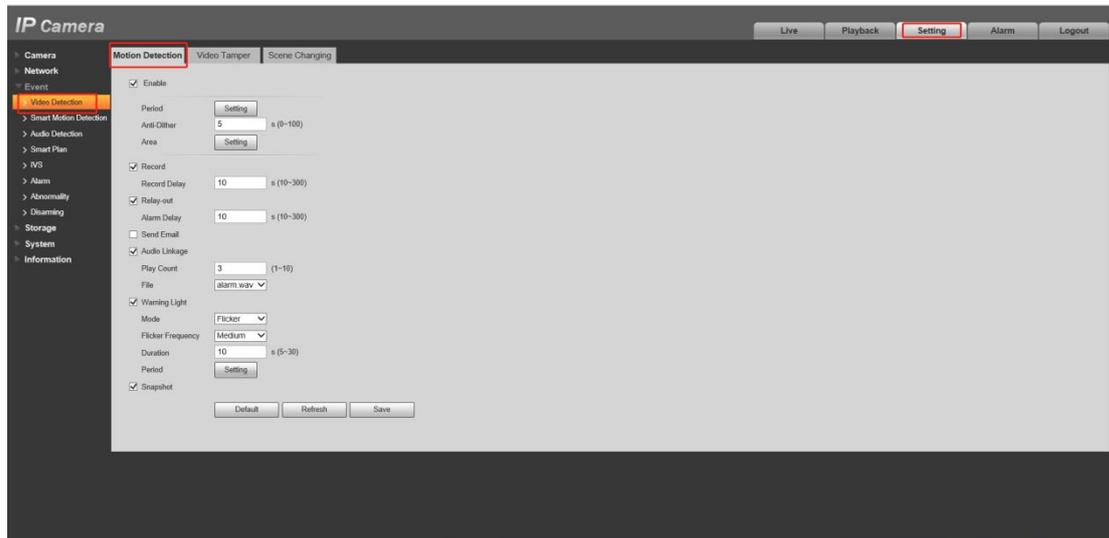

- Check "Enable"to open motion detection.
- Check "record"and setting record time.
- Check "relay-out" and the alarm information will transfer to external device.
- Check "send email"Send alarm information to email
- Check "Audio linkage "open the audio and setting Number of alarms and alarm audio.
- Check "warming light"open the light and setting flicker frequency ,duration and open time.
- Check "snapshot" will Set out to take pictures.


2. Click "period setting" to set the open motion detection time.

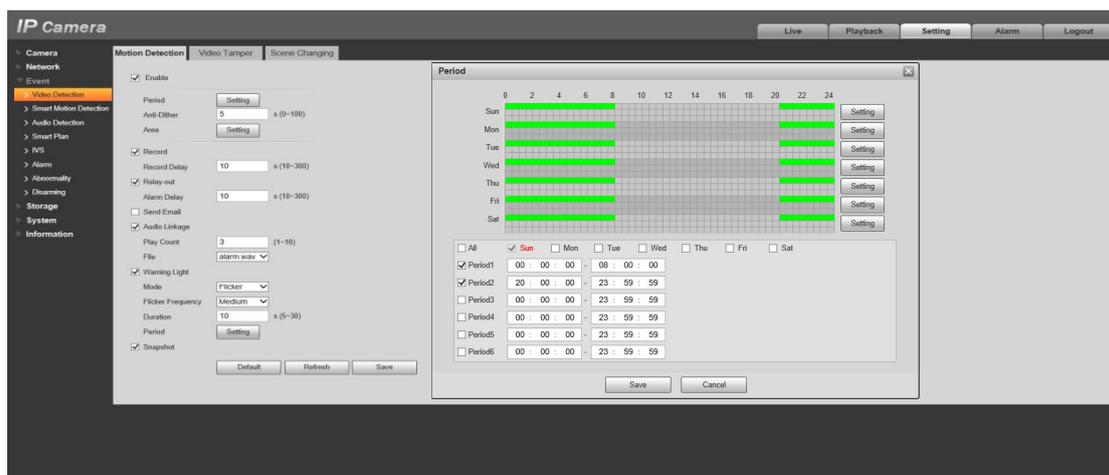

3. Click "Regional Settings" and there will be 4 rules that can be set and drawn, and each rule can be set individually.

The higher the sensitivity, the more sensitive the detection, the lower the threshold, the

lower the lower alarm limit.

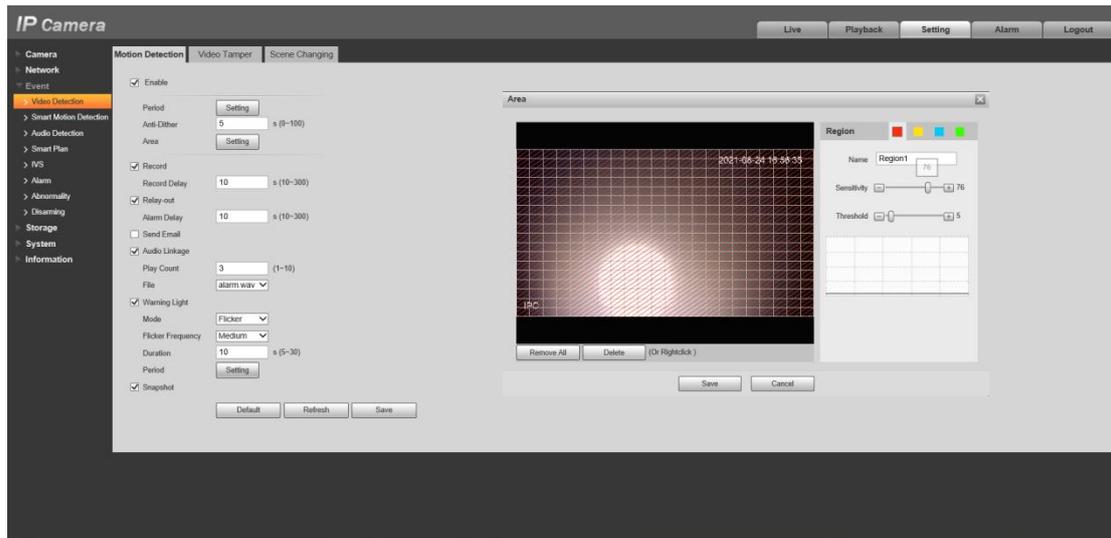

4. Click "Alarm-Motion detection",View motion detection results.

