

Dahua NVR connect Hikvision camera


1、Connect the camera to the computer, Download and install Hikvision search tool “SADP”.

Download:


<https://www.hikvision.com/en/support/tools/hitools/TS20200826033/?q=sadptool&position=2>





2、Query the IP address of the camera through the search tool, and activate the camera.

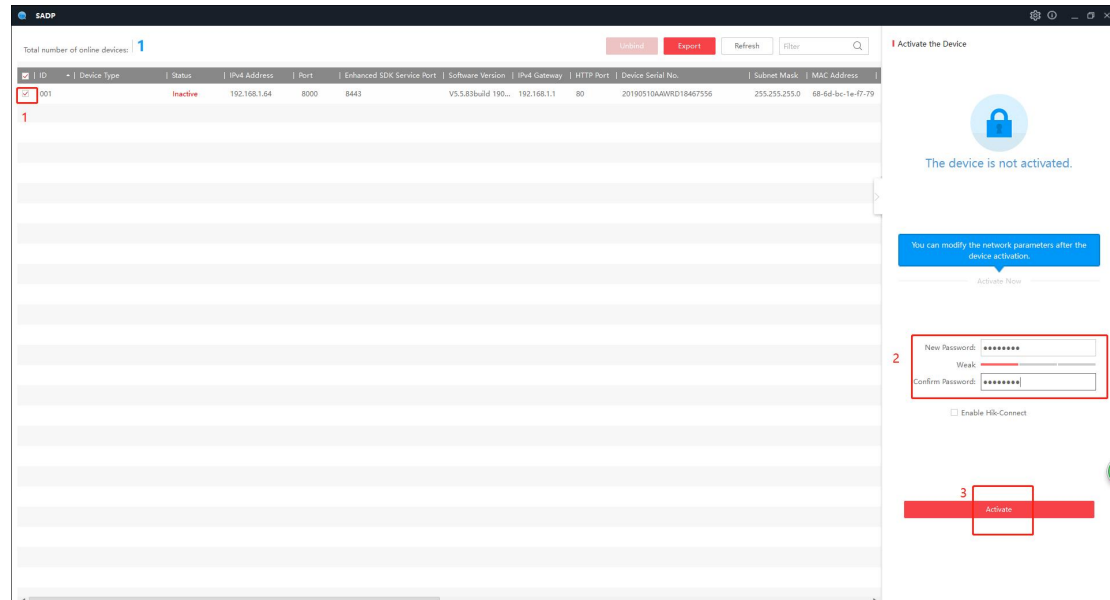

3、Log in to the camera web.

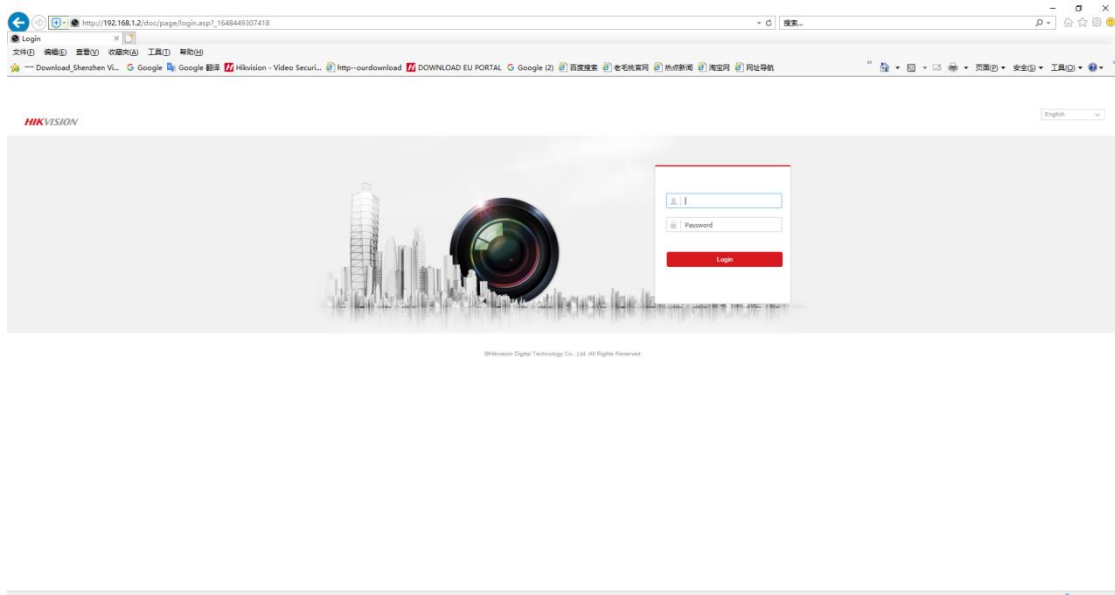


4、 Turn on the camera's onvif permissions and add an onvif user.(it is recommended that the account password is the same as the camera's login account password).

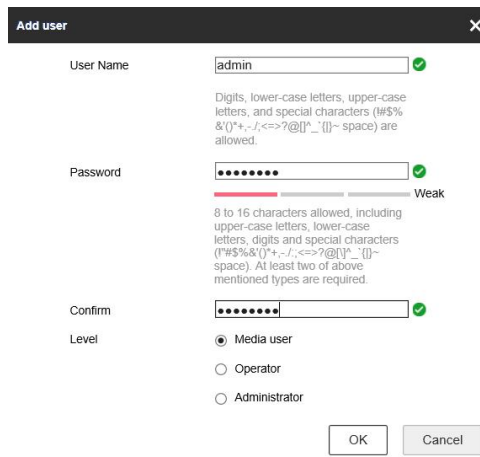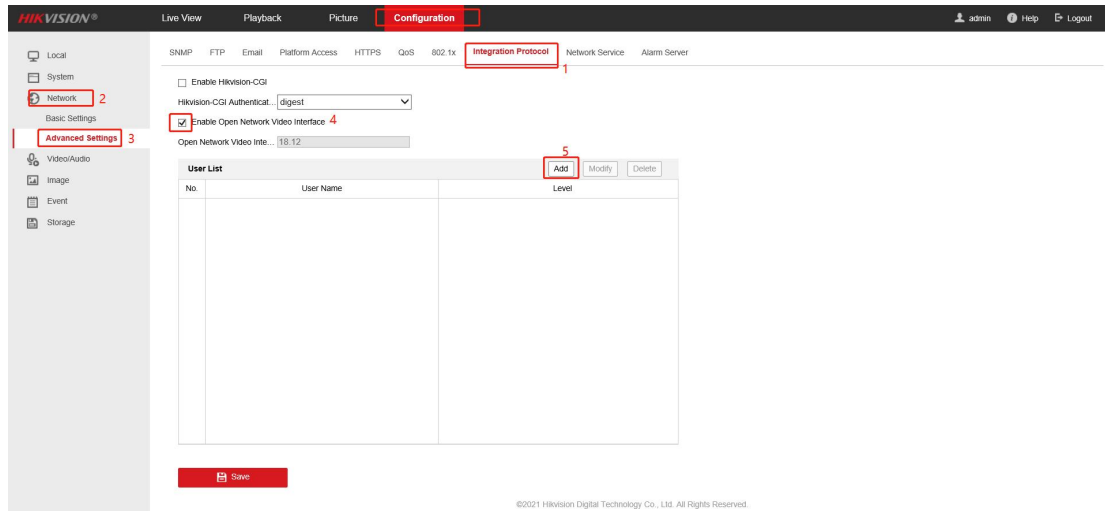


5、 Modify camera IP address.


Modify the IP address to be an address between 10.1.1.2--10.1.1.254 and the gateway is set to 10.1.1.1, Enter camera password.

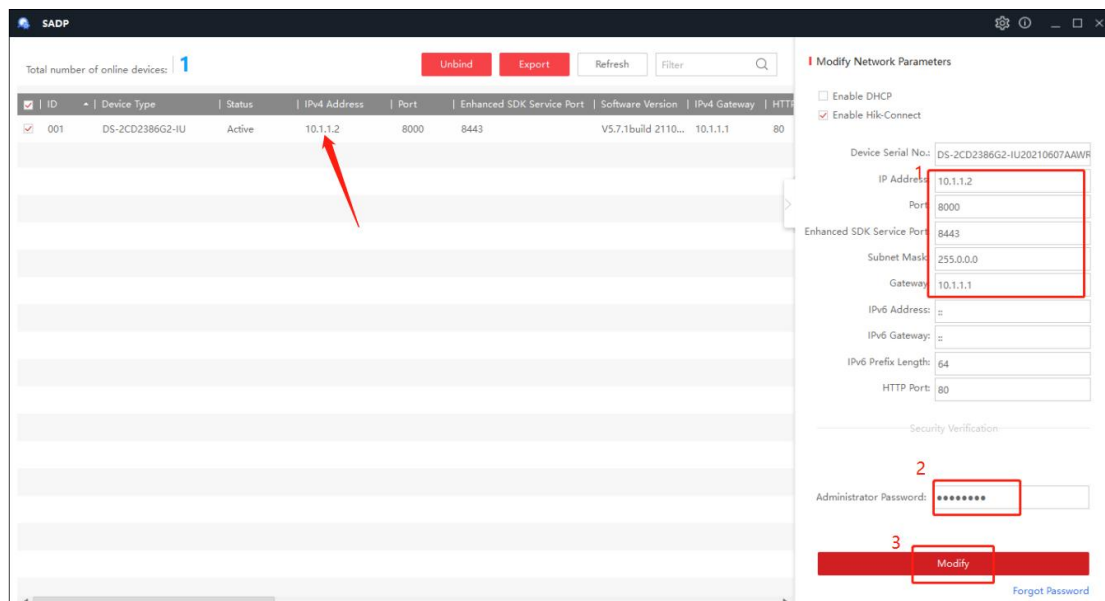

5、 Connect the camera to the POE port of Dahua NVR.

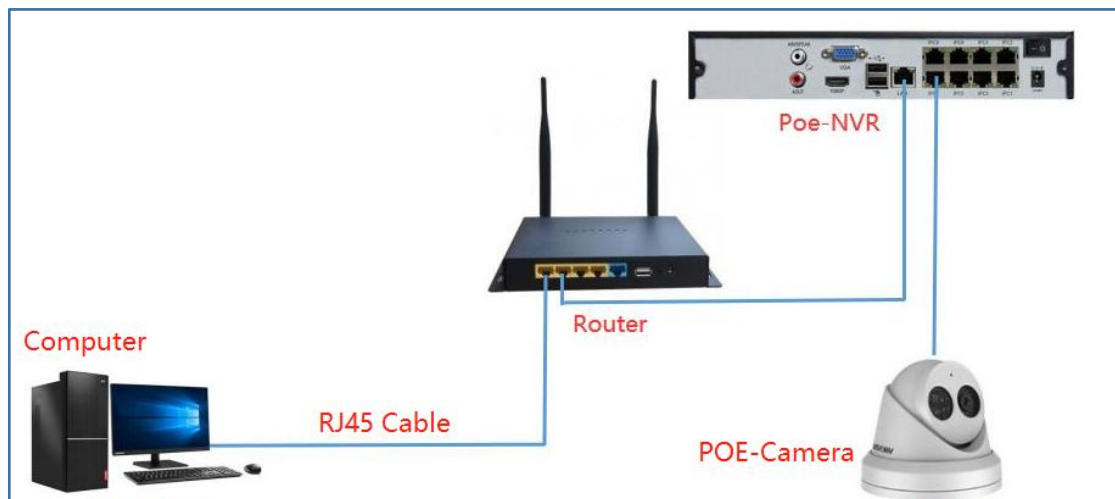

6、 Right mouse button--Main Menu -- CAMERA -- click "Manual Add" -- 1. Select the "Onvif" protocol -- fill in the camera's modified IP address -- 3. Fill in the camera's IP address, and click "Connect" -- click "OK".

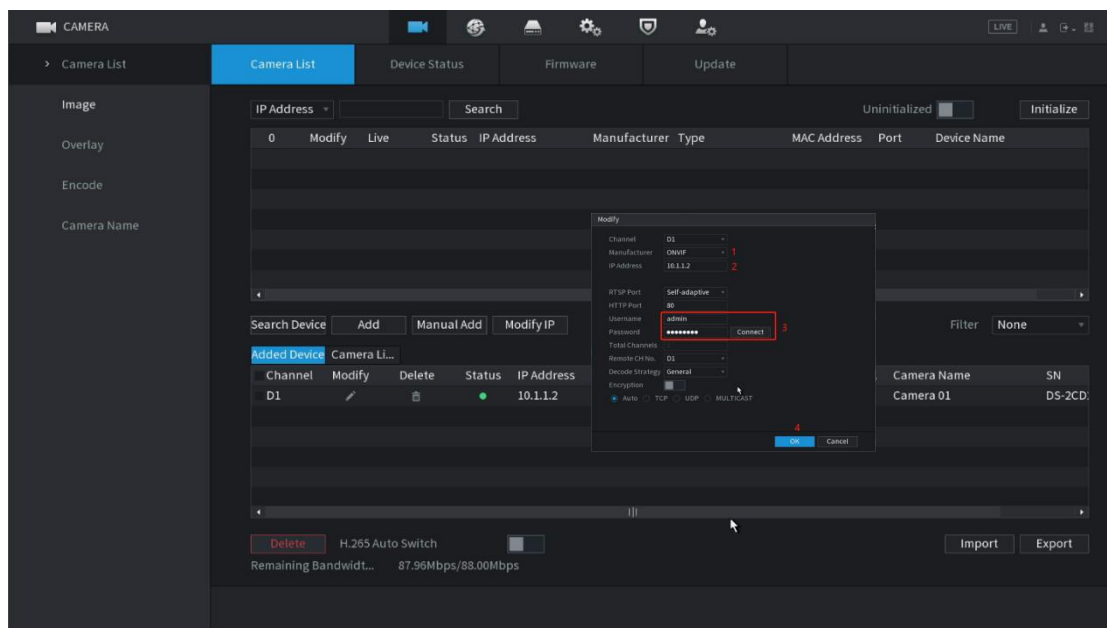

PS:When the camera status is displayed in green, the camera is successfully connected. If it is displayed in red, there is an error in the connection. Follow steps 1-5 to check whether the difference between the camera and the nvr is set correctly.