


## DAHUA NVR installation hard disk and recording settings


1. Open the NVR shell, install the hard disk on the NVR, and restart the NVR.



2. Log in to the NVR GUID, click "Main menu-STORAGE-Disk Manager" to check whether the hard disk is installed on the NVR and format the hard disk.

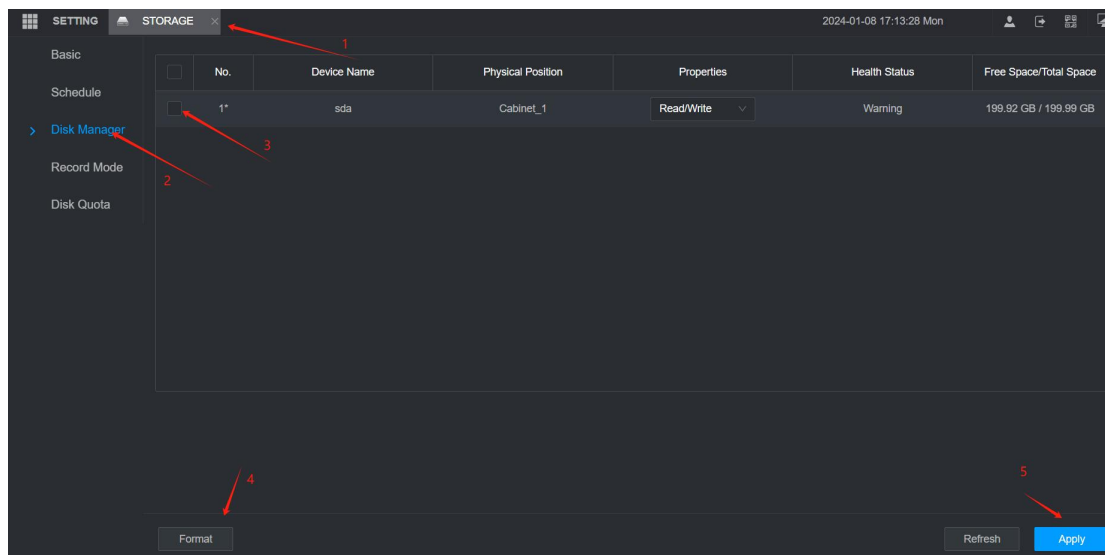

3. Select record mode. Tick "Auto" at the main stream and sub-stream.

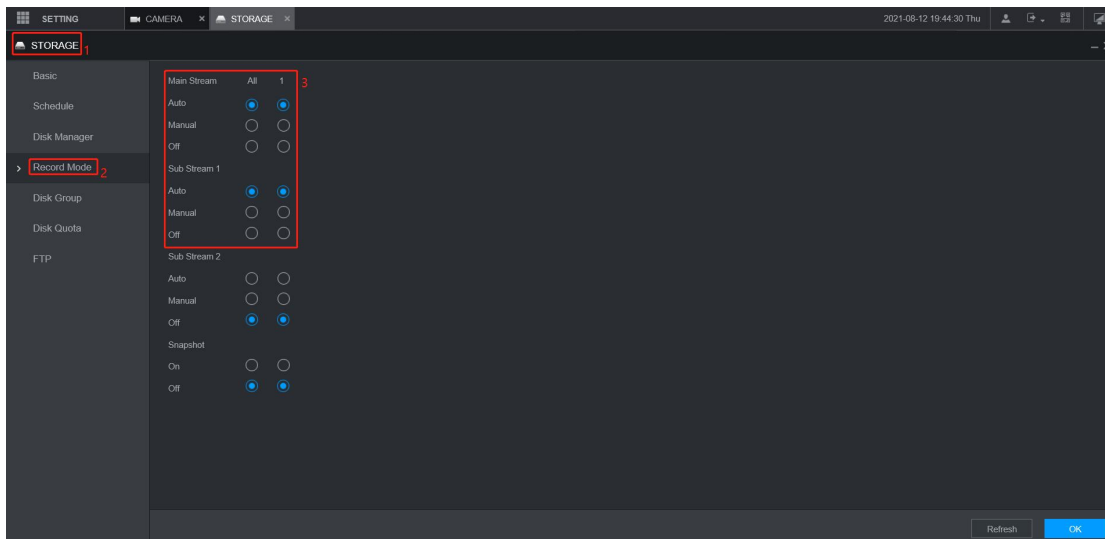

4. open the overwrite, When the hard disk recording is full, the system will automatically overwrite the oldest video

