Dahua Turns On Audio



2. Open the audio stream . click "Set up-Camera-Audio- main stream & sub stream"-save. (DMSS applications can only receive audio when substreaming is enabled)

Alhua						
		Live	Playback	Setup	Alarm	Logout
Camera 2	Audio			1		0
> Video	Encode					
Audio	Main Stream					
Network	✓ Enable					
▶ Event	Encode Mode G.711A V]				
▶ Storage	Sampling Frequency 16000]				
▶ System	Sub Stream					
▶ Information	Encode Mode G.711A Sampling Frequency 16000]				
	Attribute					
	AudioIn Type Mic					
	Microphone Volume	100				
	Default Refresh Save	6				

3.Return to the preview page, click on the speaker settings in the upper right corner of the preview screen, and turn on the sound settings of the computer, and adjust the volume to turn on the audio.

