## **DAHUA RTSP**

## 1. RTSP description

RTSP=Real-time Streaming Protocol is an application layer protocol used to control the transmission of real-time data.

2. Real-time monitoring code stream Url formata.

## rtsp://username:password@IP:port/cam/real monitor?channel=1&sub type=0

- (1) username:camera username,e.g.admin.
- (2) Password:camera password,e.g.admin.
- (3) IP: The device IP. e.g.192.168.1.108.
- (4) port: The default port number is 554, if it is the default, leave it blank.
- (5) channel: Channel number, starting with 1. For example, channel 2, then channel=2.
- (6) Sub type: Code stream type, the main code stream is 0 (that is, subtype=0), and the auxiliary code stream is 1 (that is, subtype=1).

For example, to request the auxiliary stream of channel 2 of a certain device, the Url is as follows

rtsp://admin:admin@192.168.1.108/cam/realmonitor?channel=1&subtype=0