



Enable onvif protocol for Hikvision cameras


1. Log in to the camera terminal

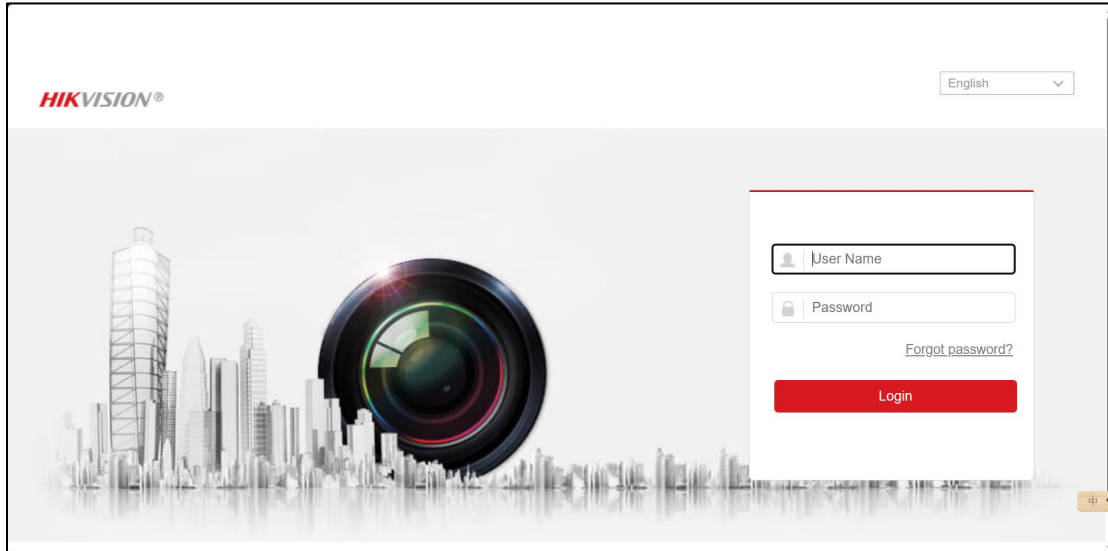


2. Click "Configuration-Network-Advanced Settings- intergration Protocol"

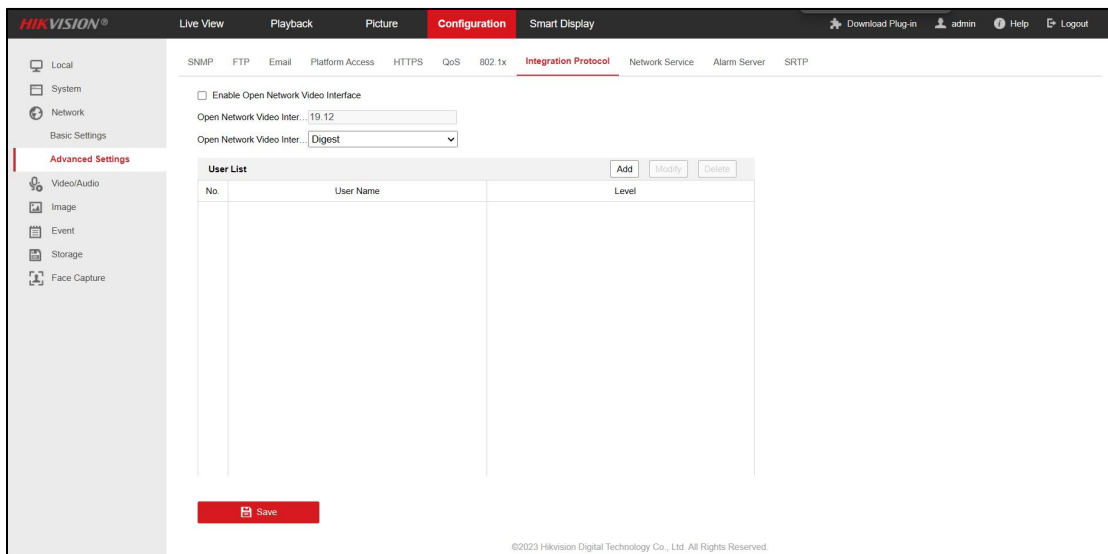

3. Click " Enable Open Network Video Interface"and create onvif account password.(It is recommended to have the same login password as the camera to avoid connection errors)

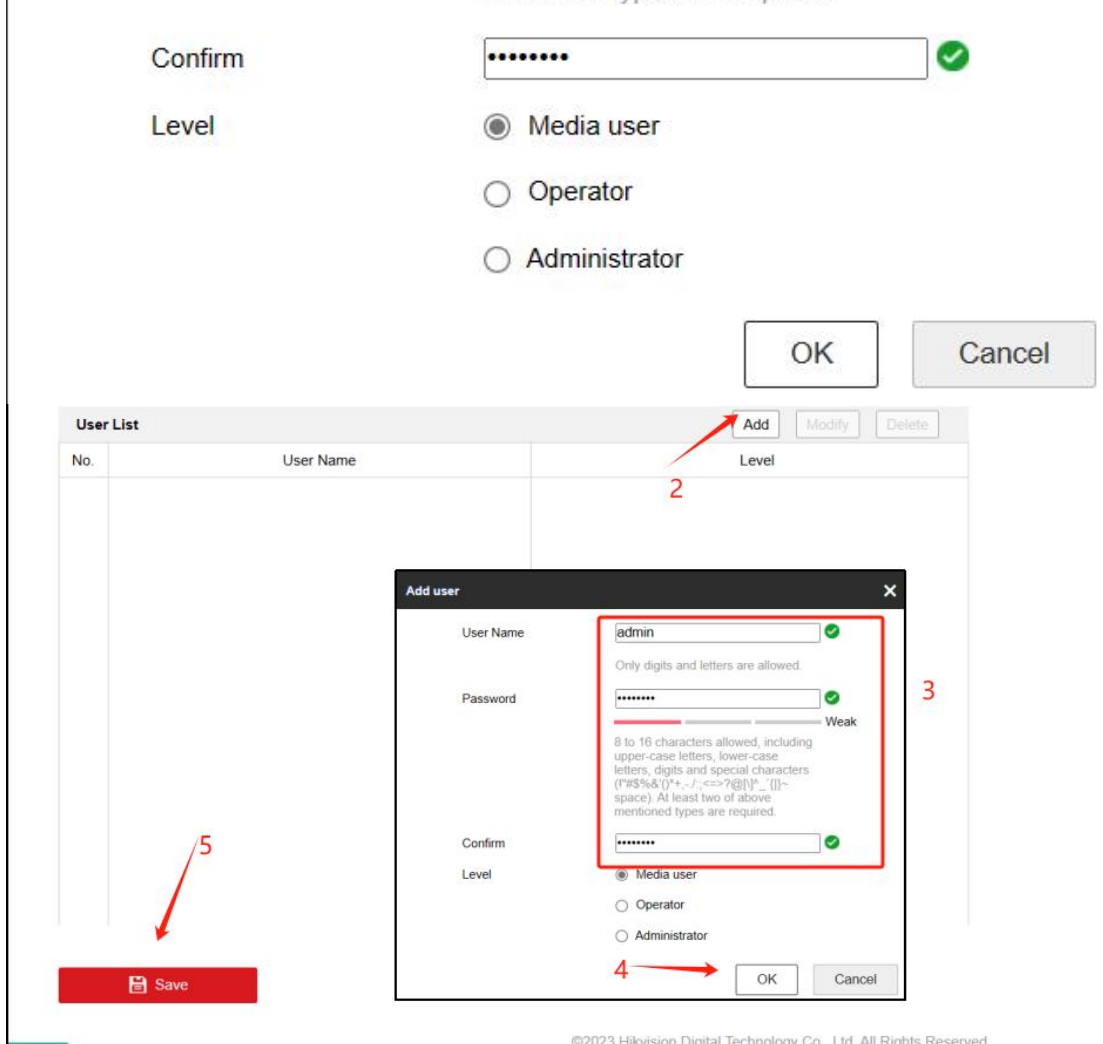

4. Correct the time of the device

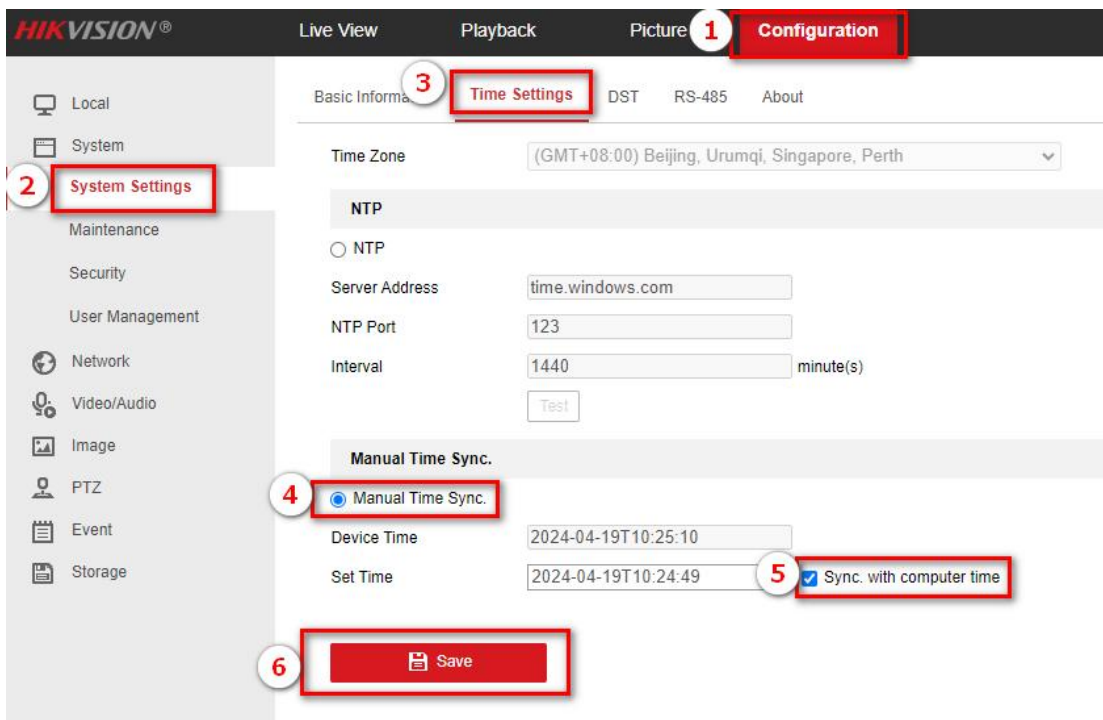

5. Disable the illegal login lock

HIKVISION® Live View Playback Picture **1** **Configuration**

Authentication IP Address Filter MAC Address Filter **3** **Security Service** Advanced Security Certificate Management

2 **Security**

4 **Enable Illegal Login Lock**

Illegal Login Attempts 7

Locking Duration 30 min

5 **Save**

Local
System
System Settings
Maintenance
User Management
Network
Video/Audio
Image
PTZ
Event
Storage