

## HDMI/VGA independent output

1. Check the specifications or datasheet to see if the NVR supports independent output

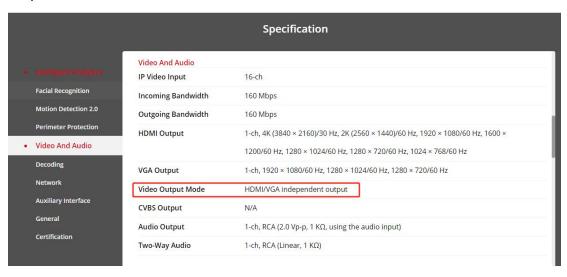

\$150 STATE	
Video and Audio	
IP Video Input	16-ch
Incoming Bandwidth	160 Mbps
Outgoing Bandwidth	160 Mbps
HDMI Output	1-ch, 4K (3840 × 2160)/30 Hz, 2K (2560 × 1440)/60 Hz, 1920 × 1080/60 Hz, 1600 × 1200/60 Hz, 1280 × 1024/60 Hz, 1280 × 720/60 Hz, 1024 × 768/60 Hz
VGA Output	1-ch, 1920 × 1080/60 Hz, 1280 × 1024/60 Hz, 1280 × 720/60 Hz
Video Output Mode	HDMI/VGA independent output
CVBS Output	N/A
Audio Output	1-ch, RCA (2.0 Vp-p, 1 K $\Omega$ , using the audio input)
Two-Way Audio	1-ch, RCA (Linear, 1 KΩ)

2. Uncheck HDMI/VGA Simultaneous Output and click Apply

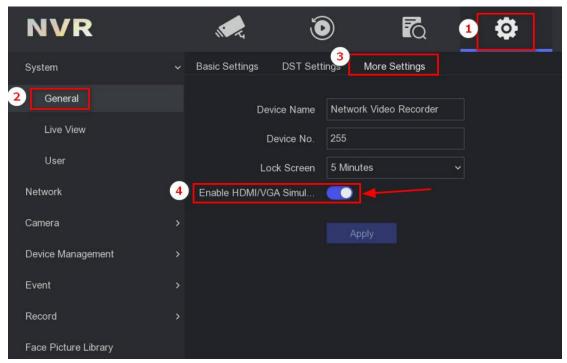

3. After the NVR restarts, it can independent output

