
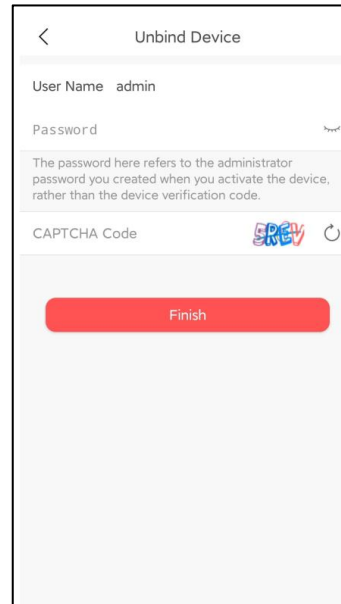



Hikconnect Unbinding

1. Unbinding via hikconnect

Open hikconnect on your phone, connect your phone to the same router as your device and scan the code to add the device, click “Unbind Device”, enter the device verification code to unbind the device.

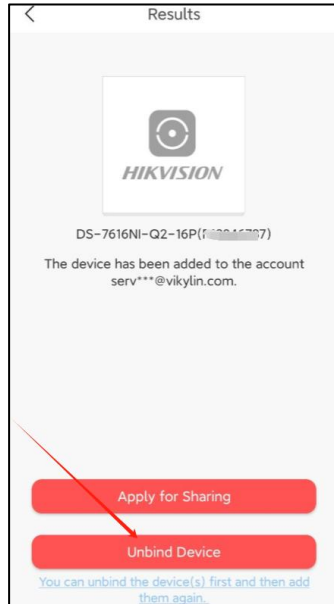


2. Unbind via sadp: open sadp, select the camera and click Unbind, enter the camera's login password and p2p password in the verification box to unbind.

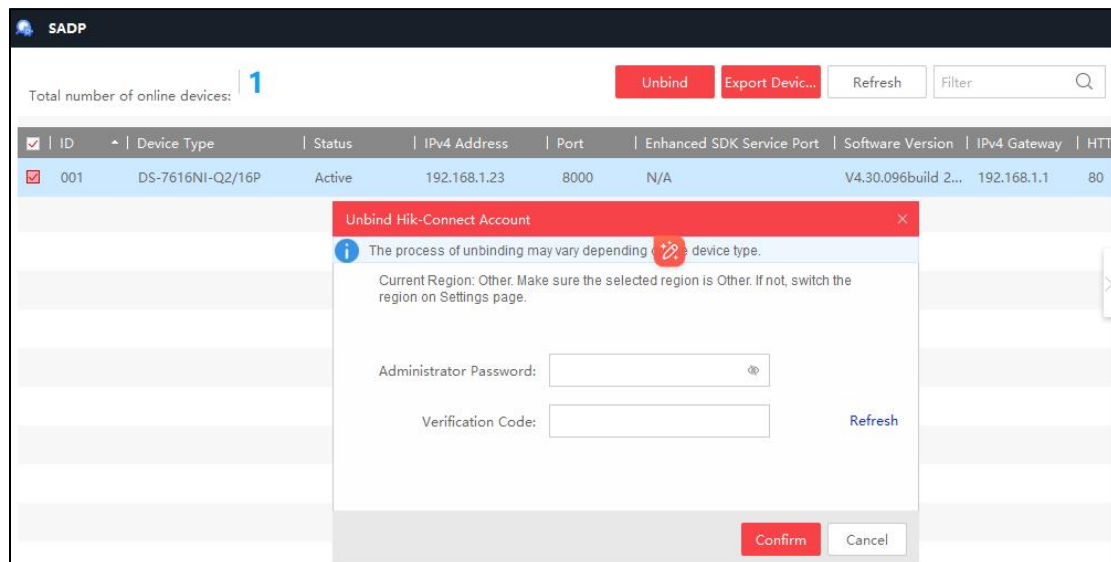

3. NVR devices can also be unbound through the local side of the device, enter the P2P interface, click Unbind.

4.0 lite series(Q K series)

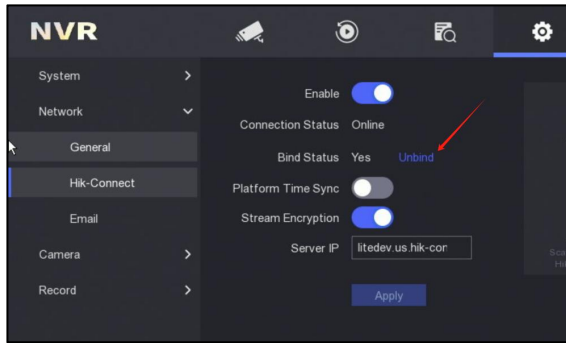

4.0 series(I M series)

