
Hikvision camera resolution setting

1. Open IE browser .enter camera IP in the search bar and log in camera web.

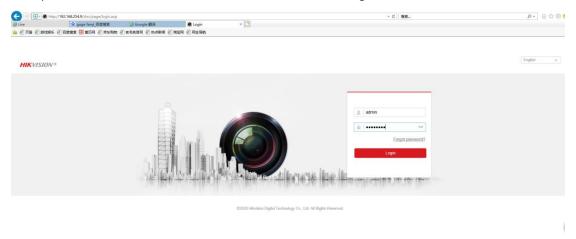

2.	Click "("Configuration-Video/Audio-Video-Resolution" to adjust the screen resolution.			
		Live View Configu	ation 1	🛓 admin 👩 Help 🕞 Logout	
8	System	Video 3 vudio ROI	Display Info. on Siteam		
G	Network 2	Stream Type	Main Stream(Normal)		
₽;	Video/Audio	Video Type	Video Stream 👻		
1	Image	Resolution	(268°1520 ✓) 4		
	Event	Bitrate Type	Variable V		
		Video Quality	Medium v		
- Callo		Frame Rate	[25 v] \$pa		
		Max. Bitrate	6144 Kops		
		Video Encoding	H264 v		
		H.264+	OFF		
		Profile	Main Profile V		
		I Frame Interval	50		
		SVC	OFF v		
		Smoothing	50]: Clear⇔Smoth]		
		🗎 Save			
			-		