



Hikvision camera wide dynamic settings

1. Open IE browser .enter camera IP in the search bar and log in camera web.

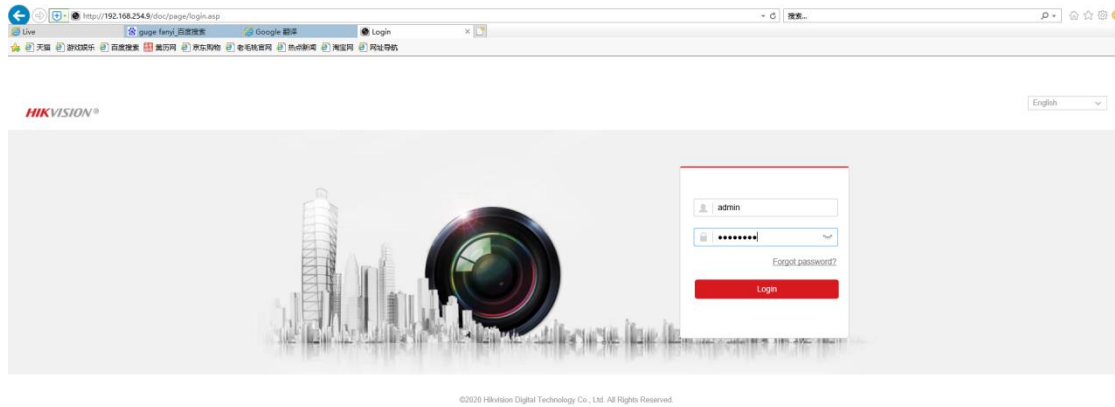

2. Click "Configuration-Image-Backlight Settings-WDR" and set WDR to On.

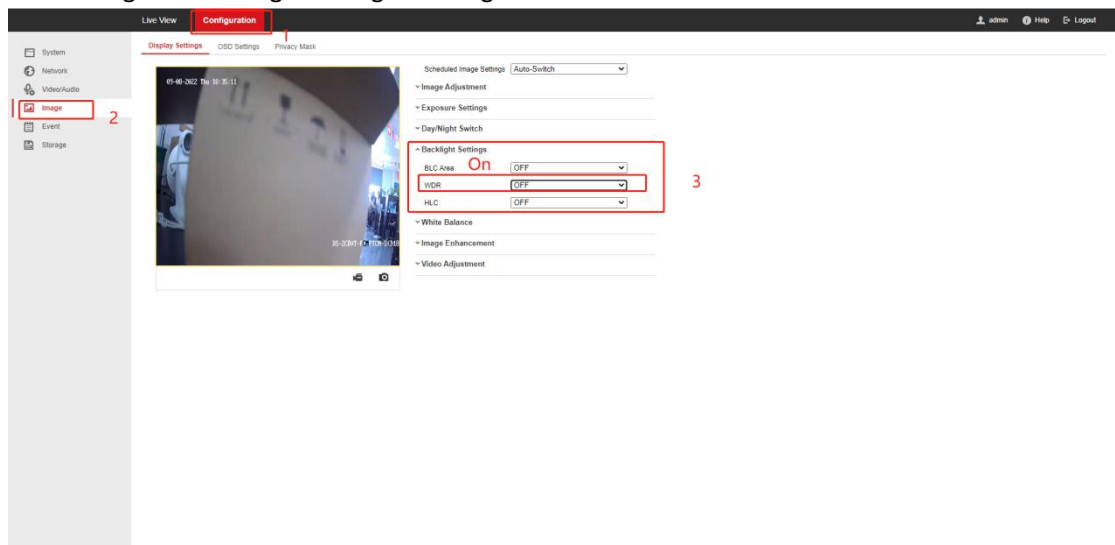


3. Adjust the picture by adjusting the Wide Dynamic Level function

Live View Configuration admin Help Logout

System
Network
Video/Audio
Image
Event
Storage

Display Settings OSD Settings Privacy Mask

09:48:26Z Thu 01-01-15



30:20:19.4 01/01/2015

Scheduled Image Settings Auto-Switch

Image Adjustment

Exposure Settings

Day/Night Switch

Backlight Settings

WCR ON

Wide Dynamic Level 75

HLC OFF

White Balance

Image Enhancement

Video Adjustment