



# Hikvision email setting



1. Log in to Gmail to set the path--Forwarding and POP/ IMAP --- Enable POP and IMAP ---Save .

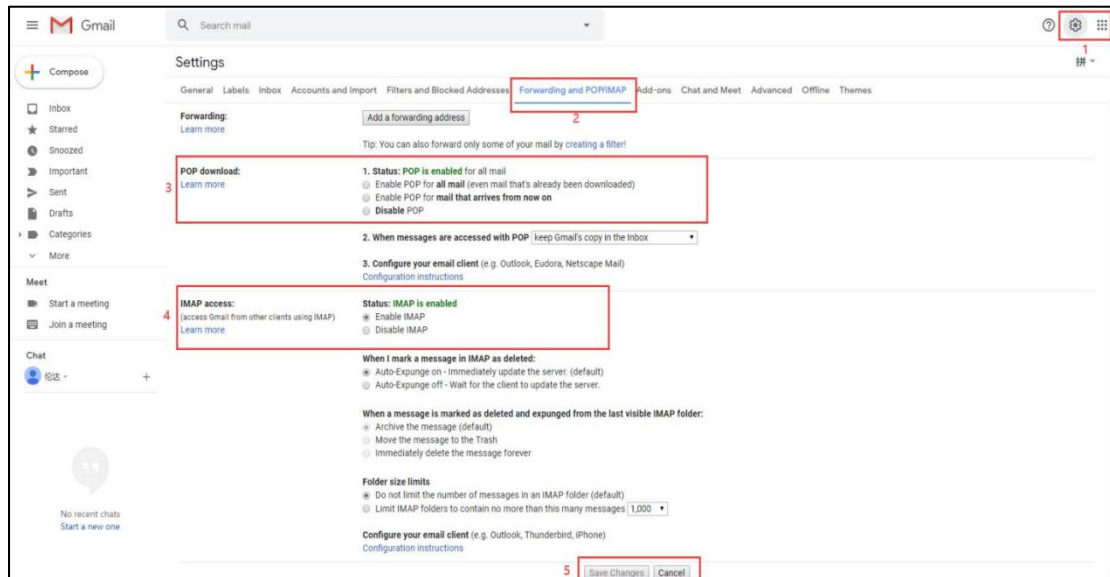

2. Choose Manage your Google Account.

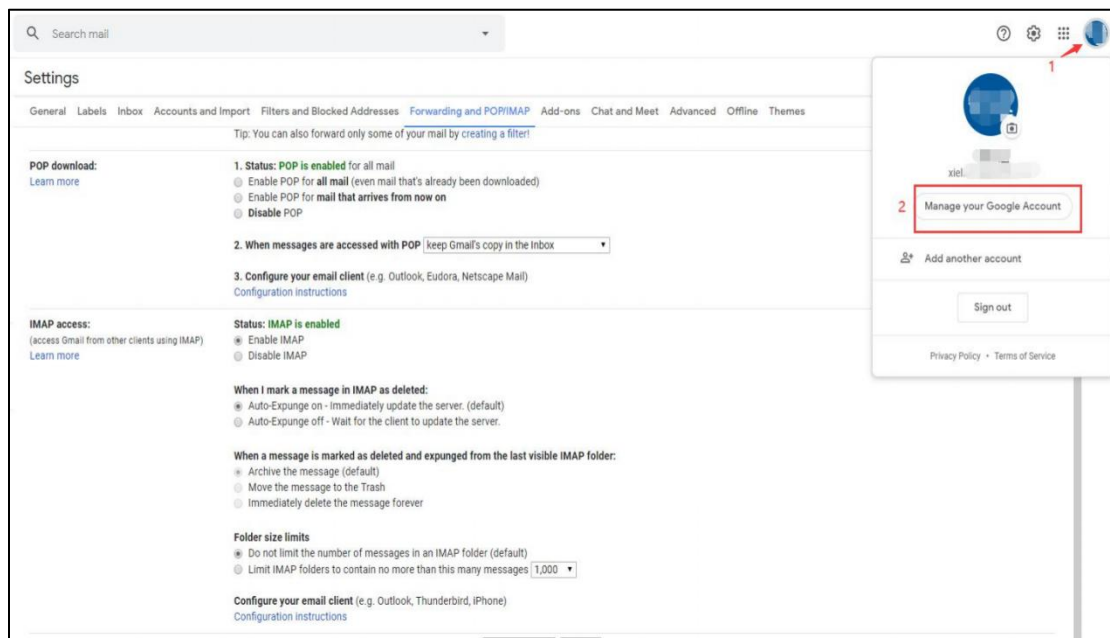

3. Enter Security Management---Enable 2-Step Verification--TURN ON.

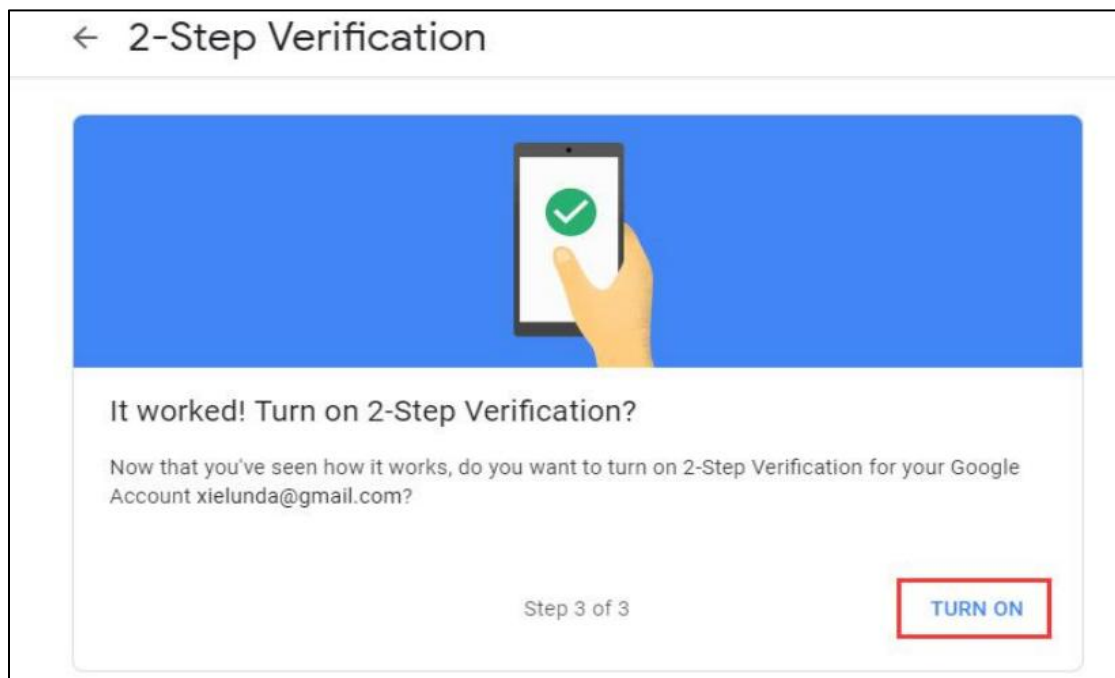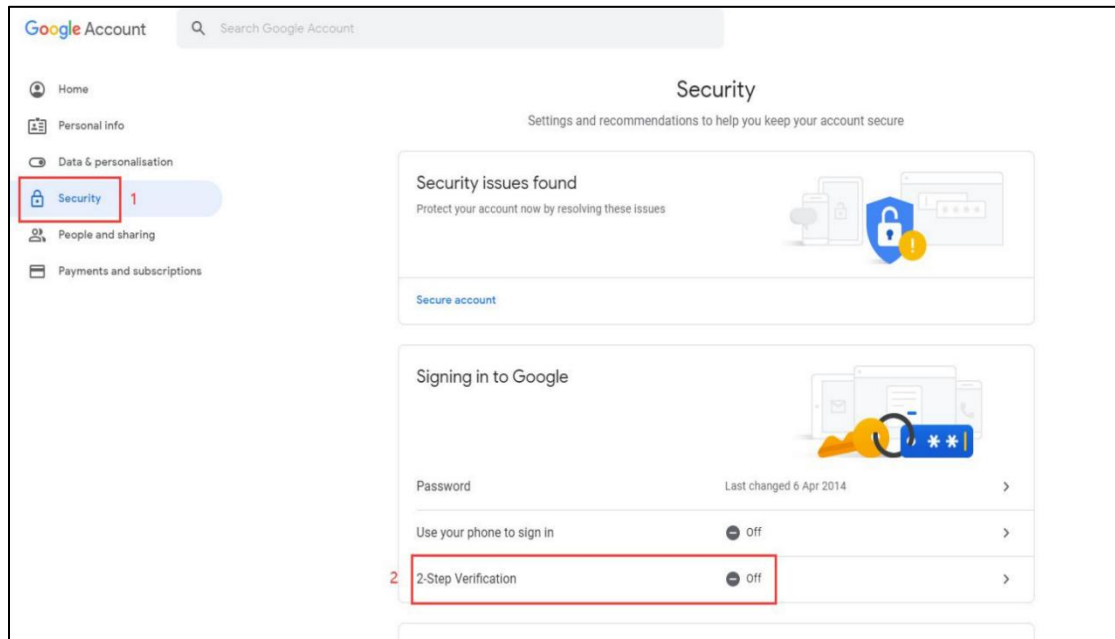

4. Enter Security Management---Click App passwords--Setting select the app and device for which you want to generate the app password.

Click App passwords App passwords settings

Google Account Search Google Account

Home  
Personal Info  
Data & personalisation  
**Security 1**  
People and sharing  
Payments and subscriptions

### Security

Settings and recommendations to help you keep your account secure

**Security issues found**  
Protect your account now by resolving these issues

Secure account

**Signing in to Google**

Password Last changed 6 Apr 2014 >

2-Step Verification  On >

2 App passwords None >

## App passwords settings

← App passwords

App passwords let you sign in to your Google Account from apps on devices that don't support 2-Step Verification. You'll only need to enter it once so you don't need to remember it. [Learn more](#)

You don't have any app passwords.

Select the app and device for which you want to generate the app password.

Select app  
Mail  
Calendar  
Contacts  
YouTube  
Other (Custom name)

Select device ▼

GENERATE

Generated app password

Email Login password

Your app password for your device


avvr [dots] pekx mppt

How to use it


Go to the settings for your Google Account in the application or device you are trying to set up. Replace your password with the 16-character password shown above. Just like your normal password, this app password grants complete access to your Google Account. You won't need to remember it, so don't write it down or share it with anyone.

DONE


5. open IE browser ,enter camera IP to log in camera web.

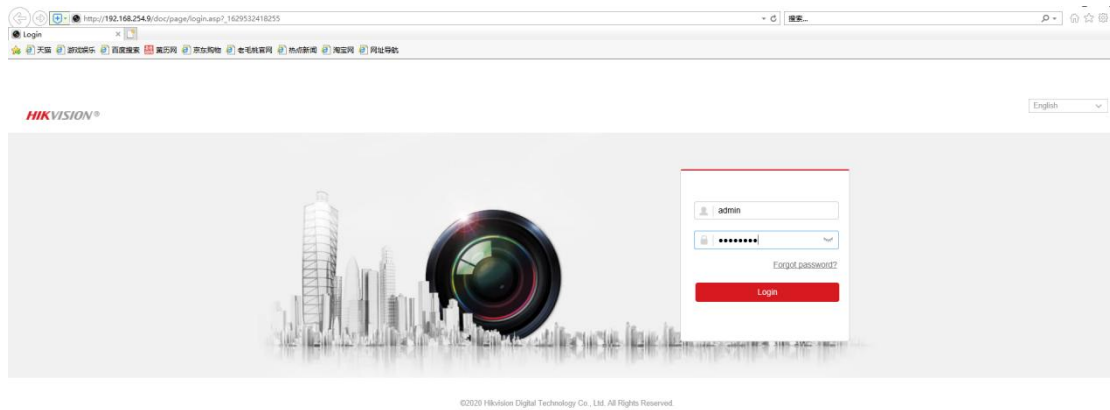

6. click "configuration-Network-Advanced Setting-Email".

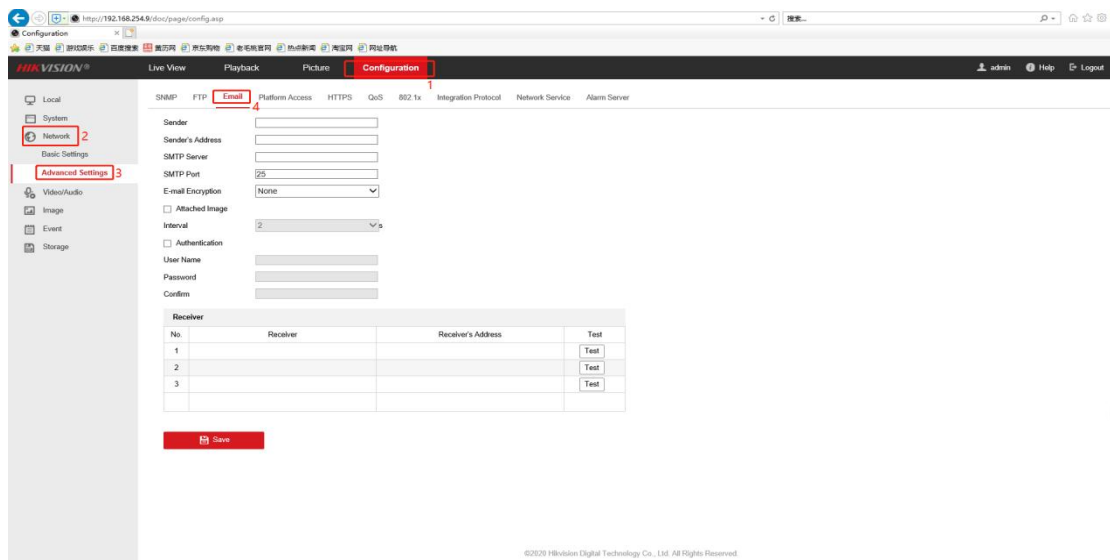

7. setting Email content.

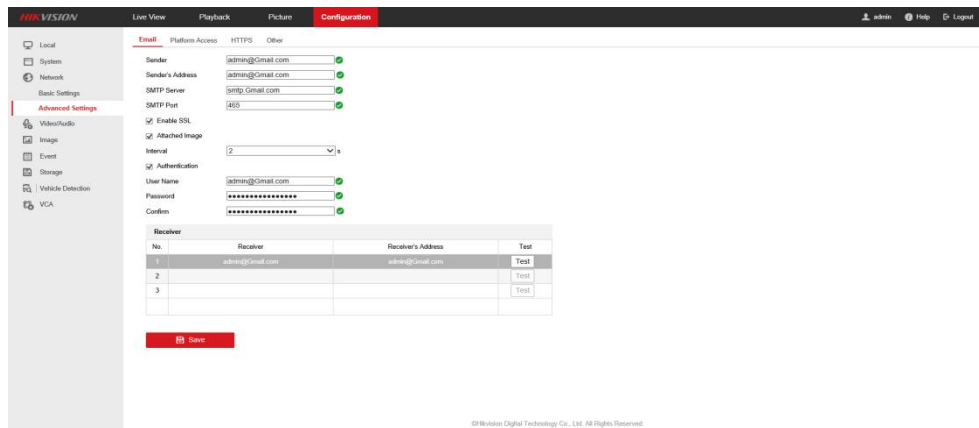

- ① Enter the Sender and sender's address.
- ② Enter the SMTP server ,“SMTP.Gmail.COM”.
- ③ The SMTP port usually “465”.
- ④ Email Encryption has three options,none,SSL,TLS.
- ⑤ Send picture interval.
- ⑥ **Authentication:Enter sender Email.The password is Login third-party software account authorization code.**
- ⑦ Enter receiver and receiver's address to test and The Email will Received a test email from the system.