



Hikvision FTP


1. Open FTP server ,stetting server IP address,port, user name and password.

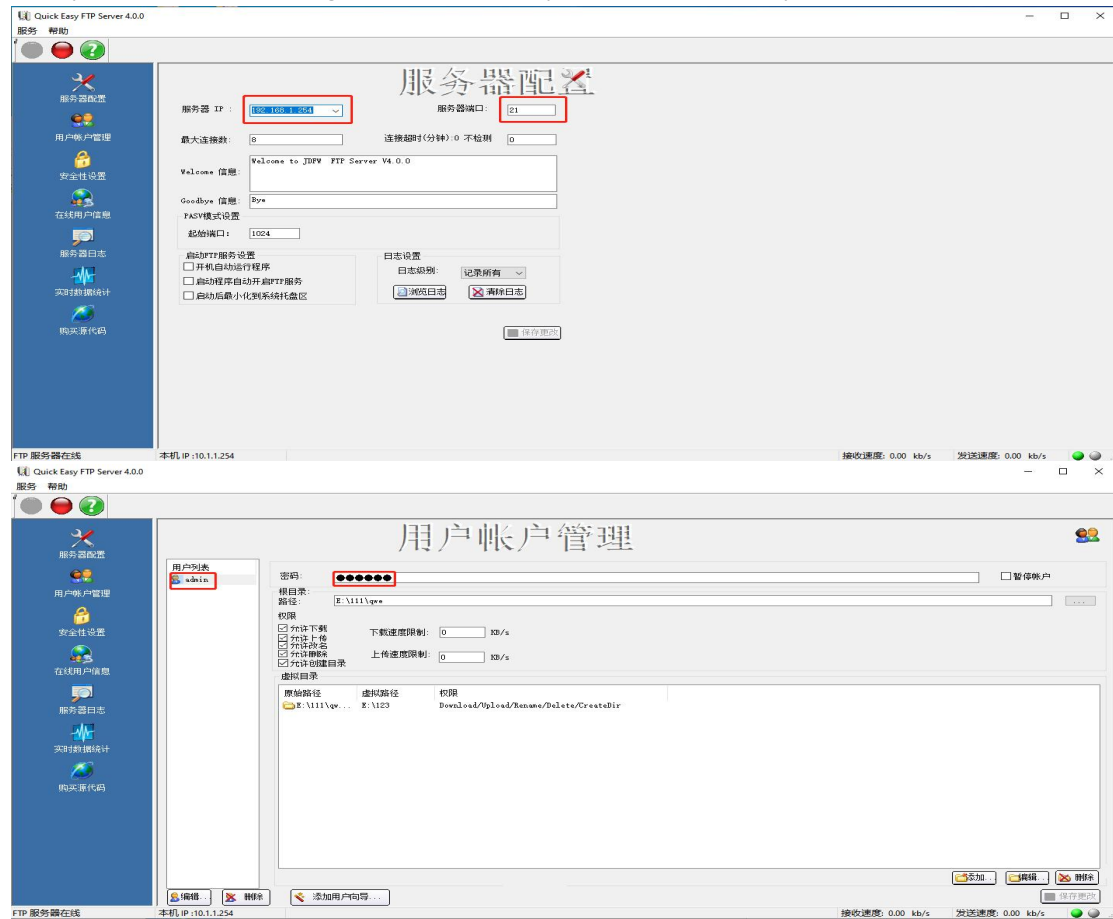

2. Open IE browser and log in camera web .

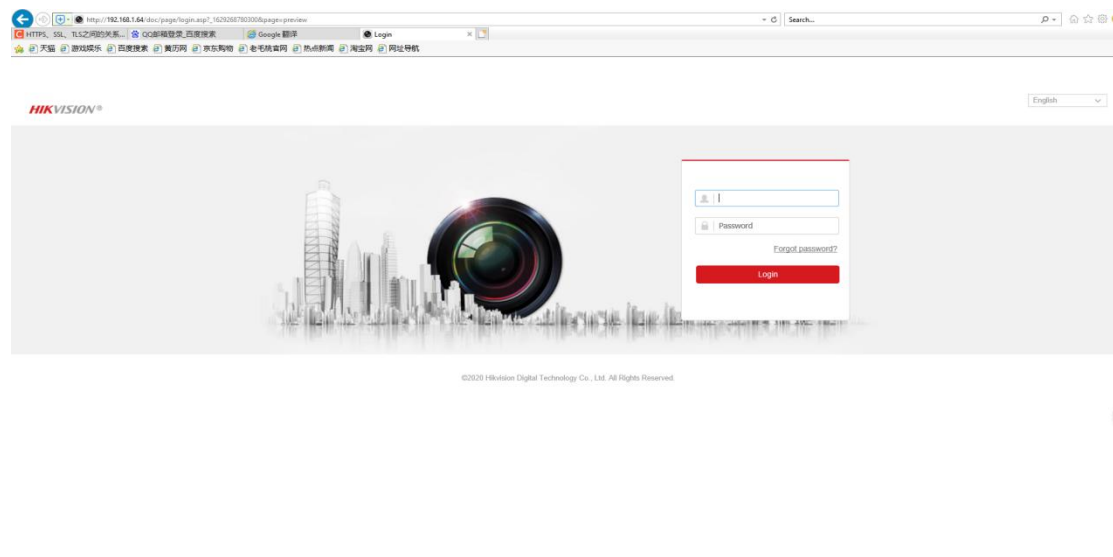

3. Click “configuration-network-advanced settings-ftp”

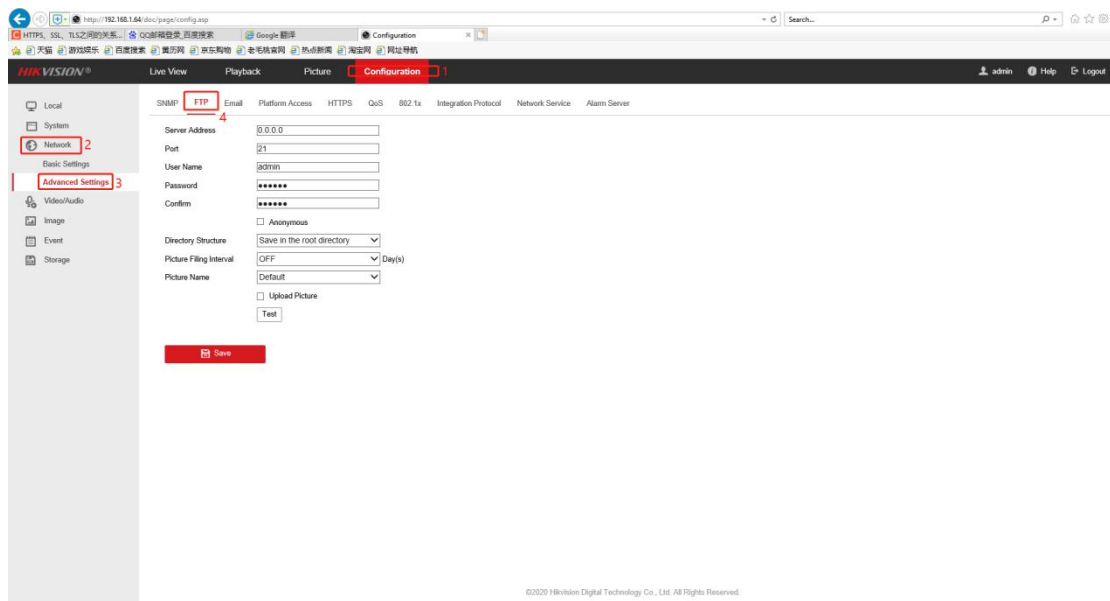

4. Set FTP content.

- ① Enter FTP IP address in server address.
- ② Enter the FTP port.
- ③ Enter the FTP user name.
- ④ Enter the FTP password and confirm.
- ⑤ Setting file save location
- ⑥ Test the connection between the camera and the FTP server.

