


# Hikvision IPC and NVR default factory

1. Download and open the Hikvision search tool “SADP”.

Download:




<https://www.hikvision.com/en/support/tools/hitools/TS20200826033/?q=sadptool&position=2>

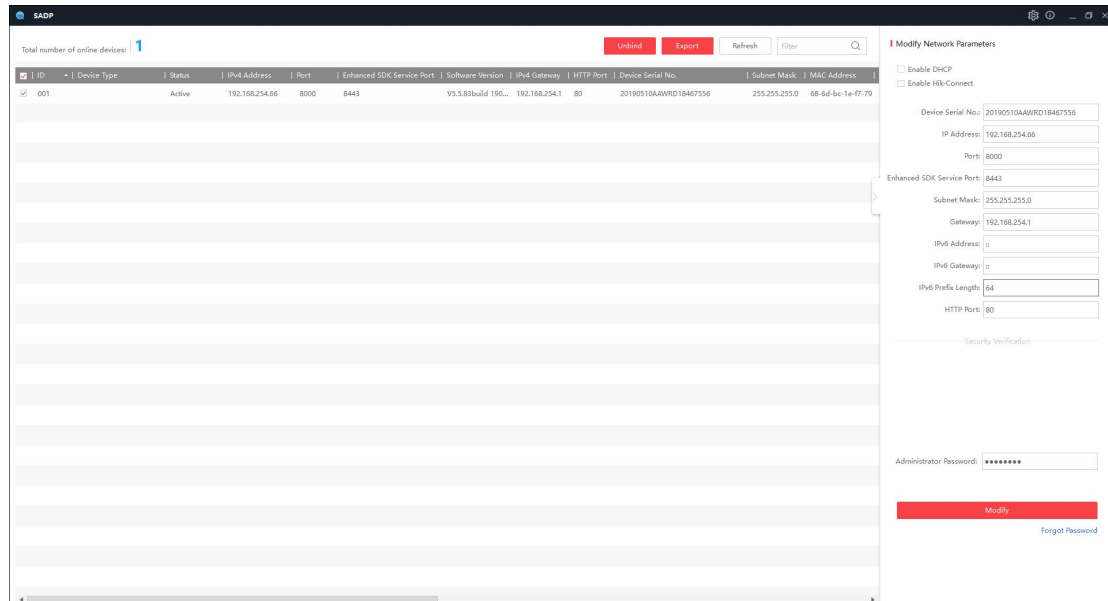


2. Modify the same network segment of the device IP and the computer (the first three digits of the IP address are the same as the computer IP, and the last digit is different).


(1) .Turn on the network adapter and check the computer IP.

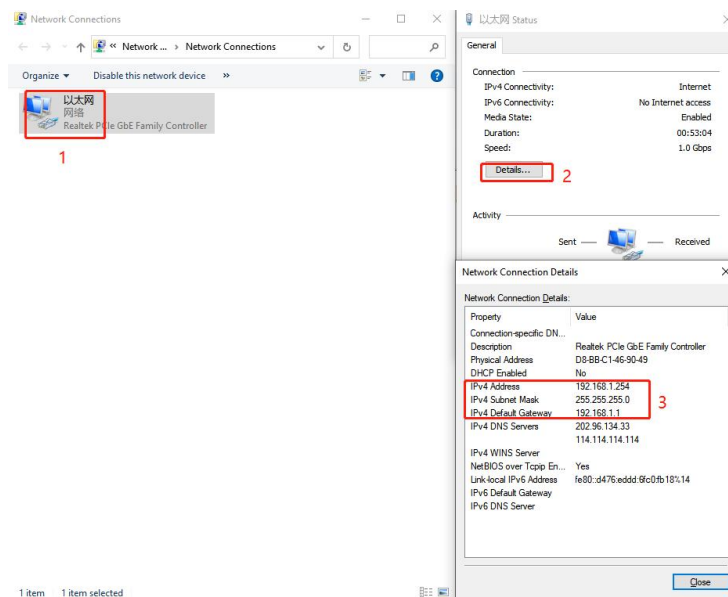

(2) . Modify the camera IP.

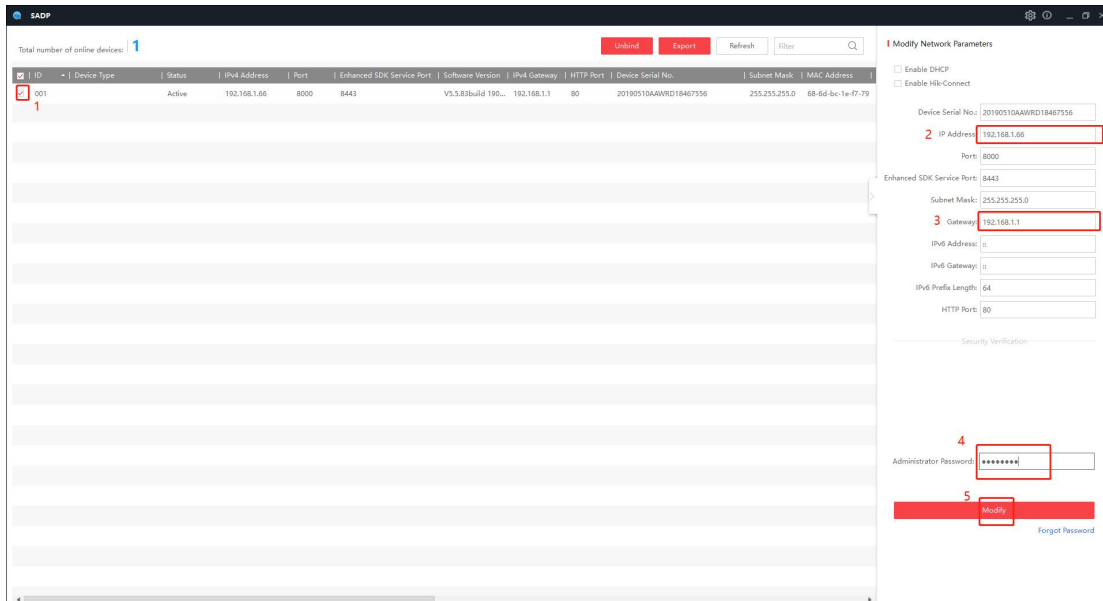

- Open the IE browser, enter the camera IP address and the camera account password to log in to the camera web terminal.

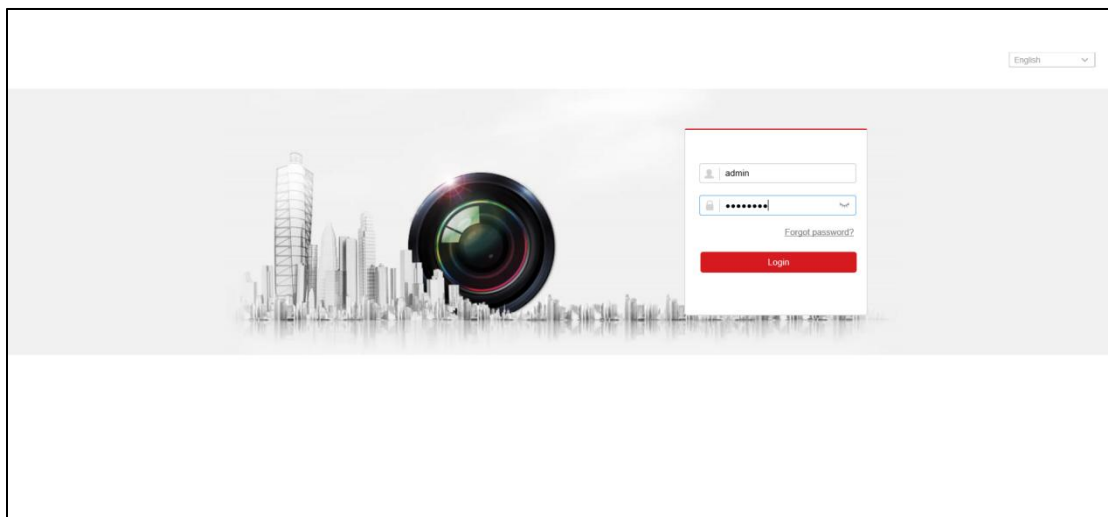

- Restore the device to the factory.  
Click "Configuration - System - Maintenance - Upgrade & Maintenance - Default" Wait for the device to start before activating and logging in.

