


Hikvision NVR connect Dahua camera

1、Connect the camera to the computer, Download and install Dahua search tool “ConfigTool”;

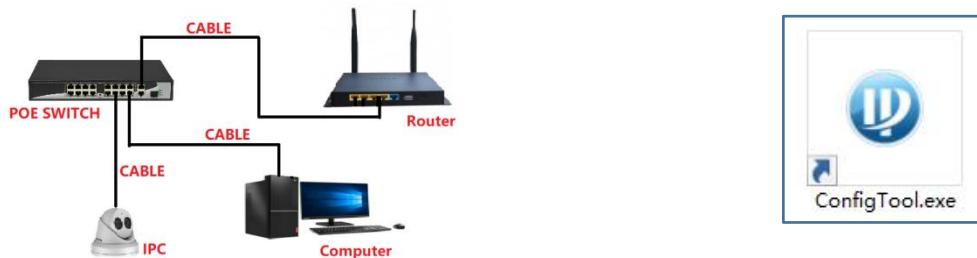

2、Query the IP address of the camera through the search tool;

The screenshot shows the ConfigTool software interface. On the left is a sidebar with options: Modify IP, Device Upgrade, Device Config, System Settings, Password Reset, Building Config, and CGI Protocol. The main panel displays a table with one row of data:

NO.	Status	Type	Model	IP	MAC	Version	Operate
1	Initialized	IPC	IPC-HFW2431S-S...	192.168.1.108	a0:bd:1d:88:7f:0b	V2.800.000...	Edit Details Web

At the bottom, there are buttons for IPV4 and IPV6, and checkboxes for Uninitialized and Initialized.

3、Click search settings--Enter the password of the camera--Click OK


The screenshot shows the ConfigTool software interface with a search dialog box overlaid. The dialog box has the following fields:

- Setting
- Current Segment Search (checkbox checked)
- Other Segment Search (checkbox unselected)
- Start IP: 192 . 168 . 1 . 1
- End IP: 192 . 168 . 1 . 255
- Username: admin
- Password: (red box highlights the password field)
- OK button (red box highlights the OK button)


The main interface shows 1 Device(s) found and a table with one row of data, identical to the previous screenshot.

4、Modify camera IP address


- ①Select Edit;
- ②Modify the IP address to be an address between 192.168.254.2---192.168.254.254 and the gateway is set to 192.168.254.1;
- ③Click OK;

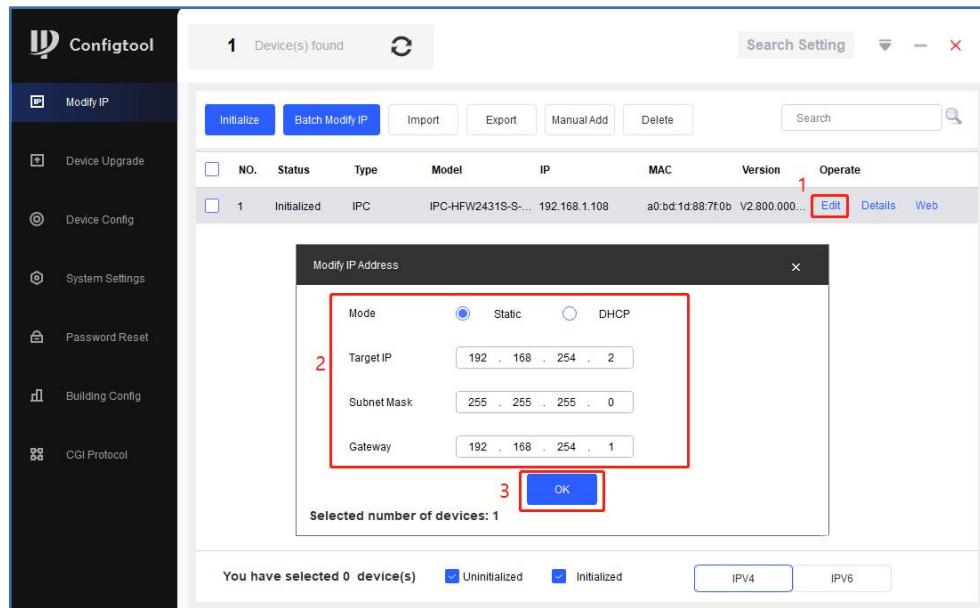

- ④The option changed successfully.

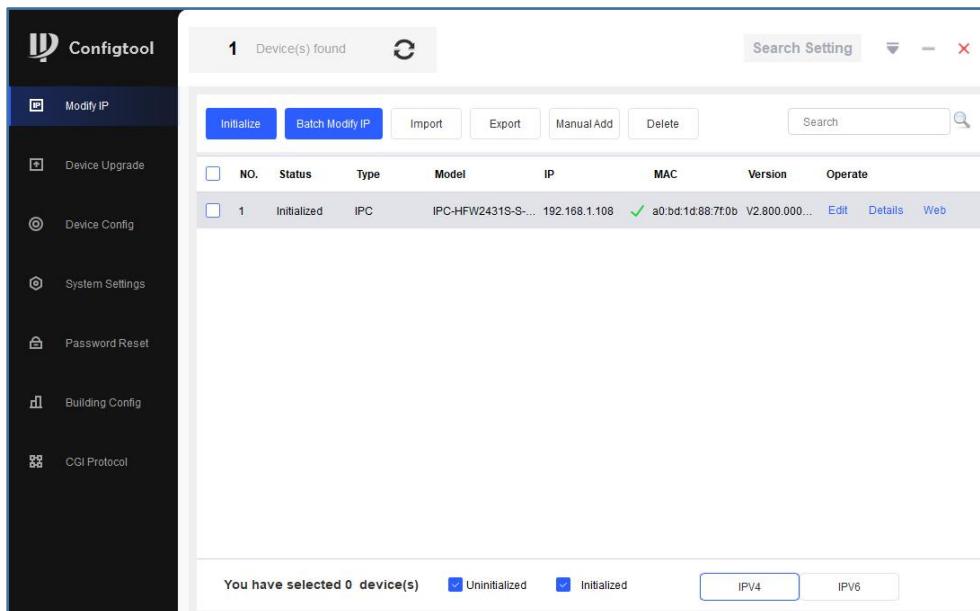

5、Connect the camera to the POE port of Hikvision NVR

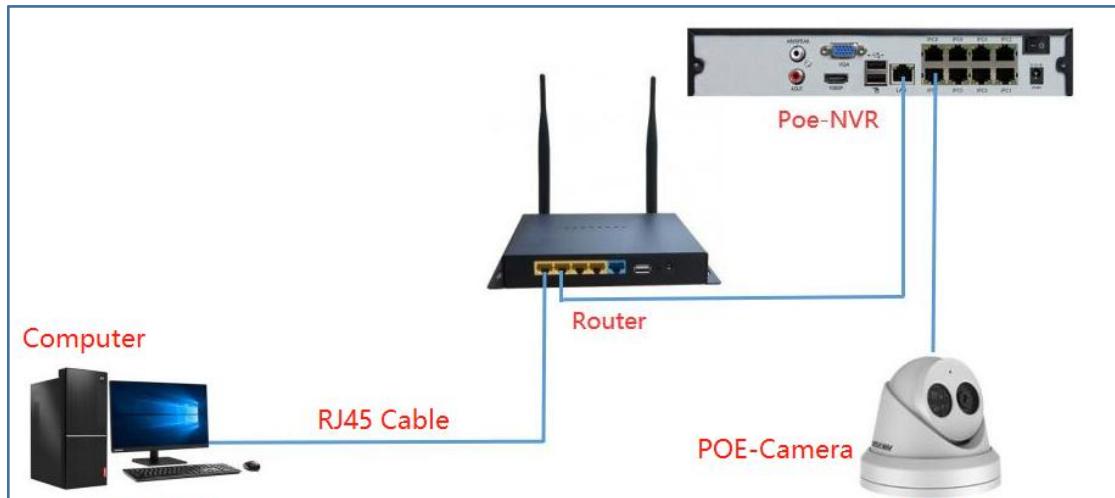

6、Right mouse button--Select Menu --①Configuration--②Camera--③Click Edit--④Choose Manual--⑤Enter 192.168.254.2--⑥Choose ONVIF--⑦Enter IP Camera Password--⑧Click OK

7、Added successfully--Choose Live View display image;

