



NVR set up intrusion alarm


1. Log in to the NVR web.

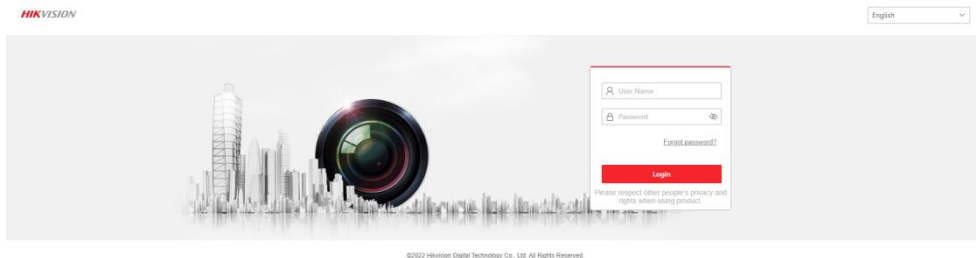


2. Click on network settings to make sure the camera is online.

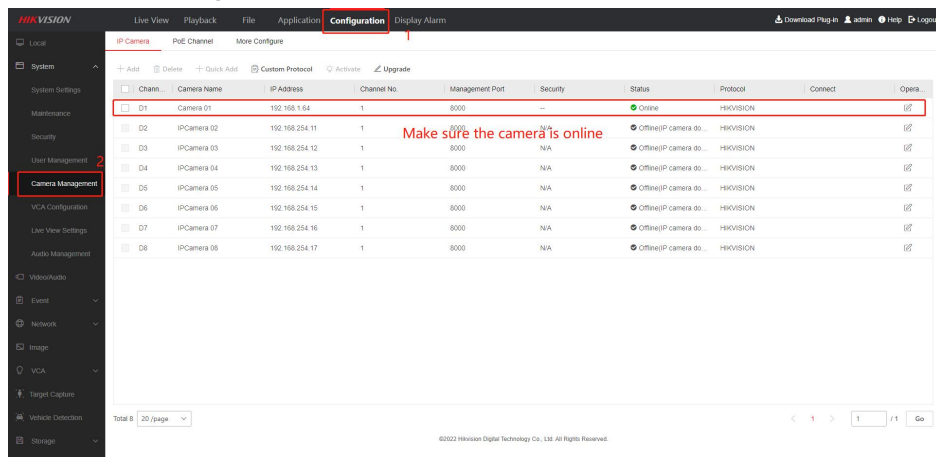

3. Switch the camera to be set via "Camera".

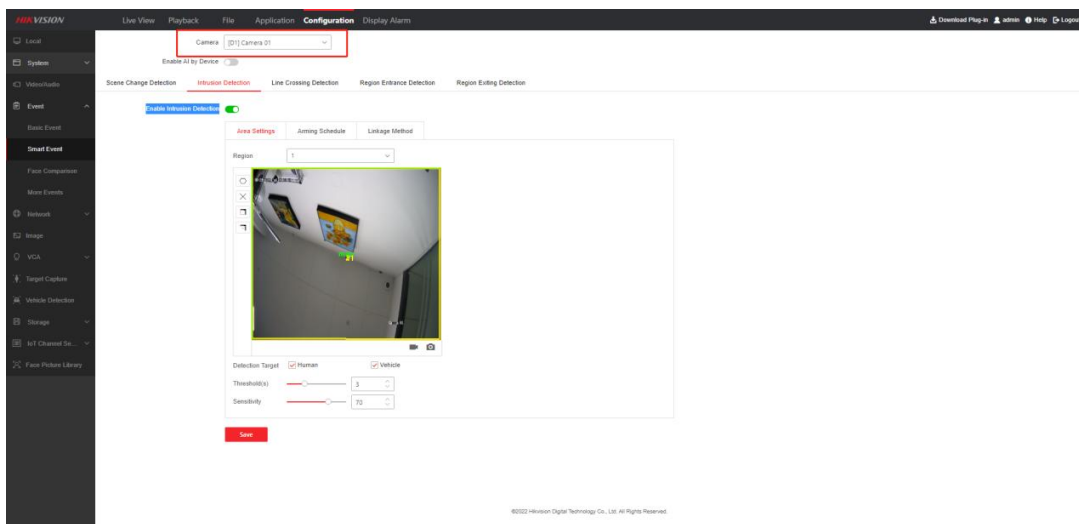

4. Start to set up intrusion detection, click "Configuration-Smart Event-Intrusion Detection".

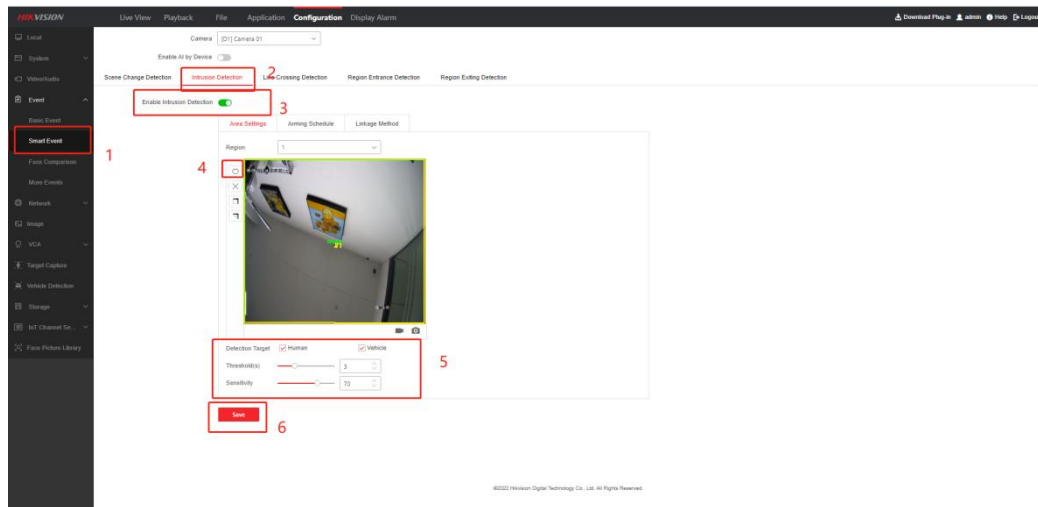

- ① Enable Intrusion Detection.
- ② According to the fourth step on the picture, click on the polygon to draw the graph.
- ③ Set detection target and sensitivity.
- ④ Click "save" to apply.