

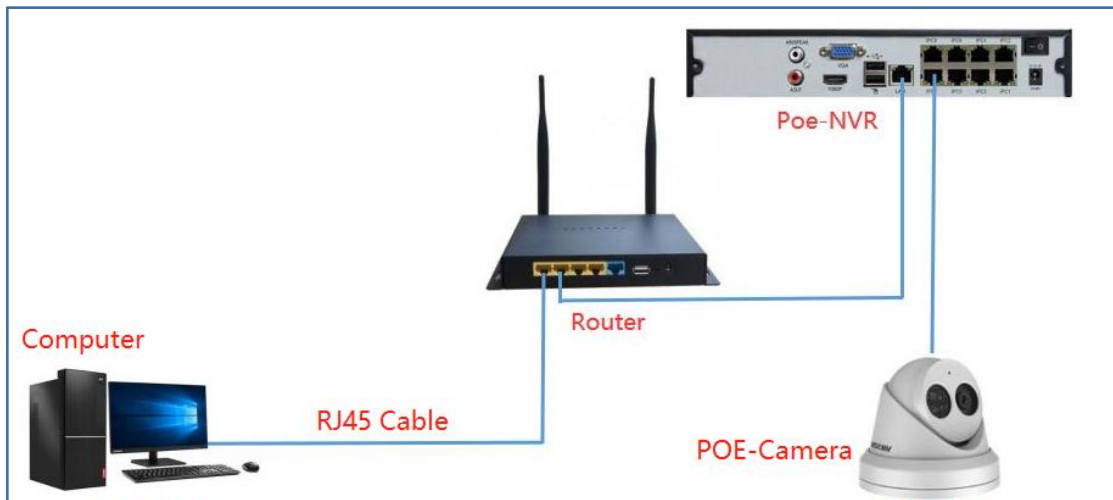


# Hikvision camera connected to NVR

**Step 1:** Connect the camera to the POE port of Hikvision NVR.

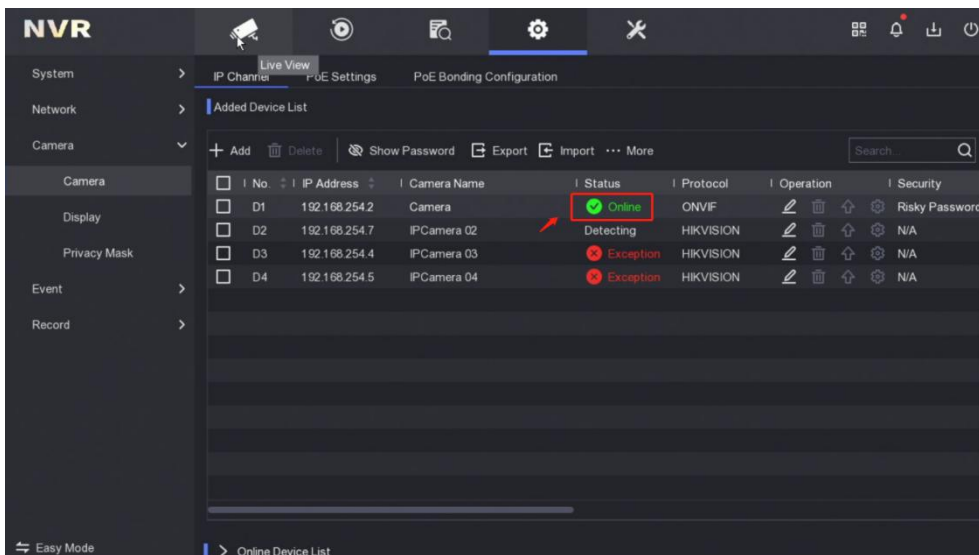

**Step 2:** Right mouse button--Select Menu --①Configuration--②Camera--③Click Edit--④Choose Manual--⑤Choose ONVIF or HIKVISION --⑥Enter IP Camera Password--⑦Click OK

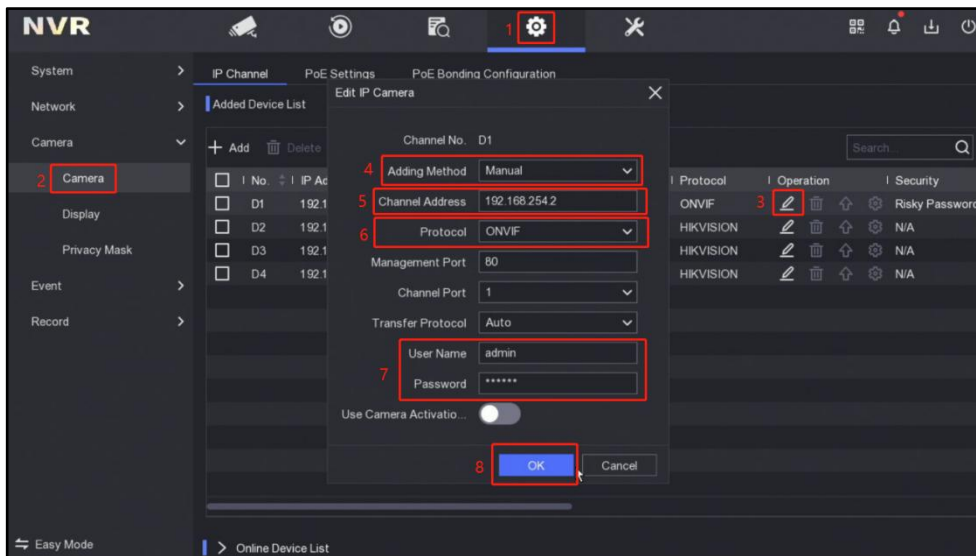

**Step 3:** Added complete --Status Online connection is successful--Live View;

