LAN Add Camera

1. Connect the camera to a switch or router on the same LAN as the nvr.



2. Go to nvr, find the add camera page, click refresh, and select all cameras to activate them.

NVR 4.0			•		} {>							
tamera 2 √	\Box Select All $+$ Custon	n Add $ imes$ Delete $\[\begin{subarray}{c} h \\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	ort/Export ০০০ More Setting	gs	1	Enter a keyword.						
IP Camera												
PoE Settings												
O Display												
Privacy Mask												
Encoding Parameters												
	D1: The user name or the	passw D2: The network is	unreachable. D3: IP car	nera does not exist.	D4: IP camera does not exist.	D5: IP camera does not exist.						
4	Δ	4										
	Number of Unadde 🛛 🖈											
	+ Add 🖸 Ref	resh 🖉 Activate				Enter a keyword.						
	🔲 No. 🗌	Status Security	IP Address Edit	Device Model	Protocol Man	agement Serial No.						
	□ 1 _	Active	192.168.1.110 🗹	HK-IPCAM-HI	HIKVISION 8000	D PTZ-4818X-IS2						
	2	- O Active	192.168.1.38	IPC	ONVIF 80							
	4	- O Active	192.168.1.200	IPC	ONVIF 80							
	5	- Ø Active	192.168.1.89	IPC	ONVIF 80							
		7										

3. After activating the camera, change the ip address of the camera to the same network segment ip address as the camera.

N	VR 4.0			к. Х	$(\verb{(A)})$		\mathfrak{S}			ti)	e es			Ċ
¢_⊜	Camera	~	Select All	+ Custom	Add $ imes$	Delete 📑 Ir	nport/Export ००० /	vlore Settin	ngs			En	ter a keyword.	₿ं≣
	PoE Settings				Edit ID C									
0	Display				Eultip Ca	amera								
	Privacy Mask					No.	1							
	Encoding Parameters	>				MAC Address	f0:00:00:de:92:26		2					
			D1: The use	er name or the p	b	IP Address	192 . 168 . 1	. 110			D4: IP camera does not e	xist. C	D5: IP camera does not e	xist.
						Subnet Mask	255 . 255 . 255	. 0						
					Mar	agement Port	8000							
						Password								
			Number of Un	nadde 🛛 🔊	3		L							
			+ Add	Ġ Refre	s								Enter a keyword.	
				No. SI							Protocol	Managem	ent Serial No.	Fi
				1				C C	эк	Cancel	HIKVISION	8000	PTZ-4818X-IS2	ь P1
				2 -		Active	192.168.1.38		IPC		ONVIF	80		
				3 -	6	Active	192.168.1.108	Ľ	IPG		ONVIF	80		
				4 -		Active	192.168.1.200		IPC	1	ONVIF	80		
				5 -	•	Active	192.168.1.89	Ľ	IPC		ONVIF	80		

4. Select the camera and add it

Ν	VR 4.0] (\square			લ છે		Ŷ
¢_⊚	Camera	~	Select Al	I $+$ Custom Ade	imes Delete	_≏ Import/Export ∘∘	 More Settir 	ngs			Enter a keyword.
	PoE Settings										
0	Display										
	Privacy Mask										
<u>.</u>	Encoding Parameters	>									
			D1: The us	er name or the pas	sw D2: The	network is unreachable.	D3: IP ca	amera does not exist.	D4: IP camera	does not exist.	D5: IP camera do
	2		Number of Unadde 😤 😒								
			+ Add	<table-cell> Refresh</table-cell>	P Activate				4		Enter a keywor
		1		No. Statu	s Security	IP Address	Edit	Device Model	Pro	otocol Mana	agement Serial
				1 –	😒 Active	192.168.1.110) E	HK-IPCAM-HI	HI	VISION 8000	PTZ-4
				2 -	Active	192.168.1.38	Ľ	IPC	ON	IVIF 80	
				3 -	Active	192.168.1.108	3 🗹	IPC	ON	IVIF 80	
				4 -	Active	192.168.1.200) 🗹	IPC	ON	IVIF 80	
				5 -	Active	192.168.1.89		IPC	ON	IVIF 80	