



Dahua Camera IP address setting

Step 1: Open “Config Tool” ,click “search setting” .

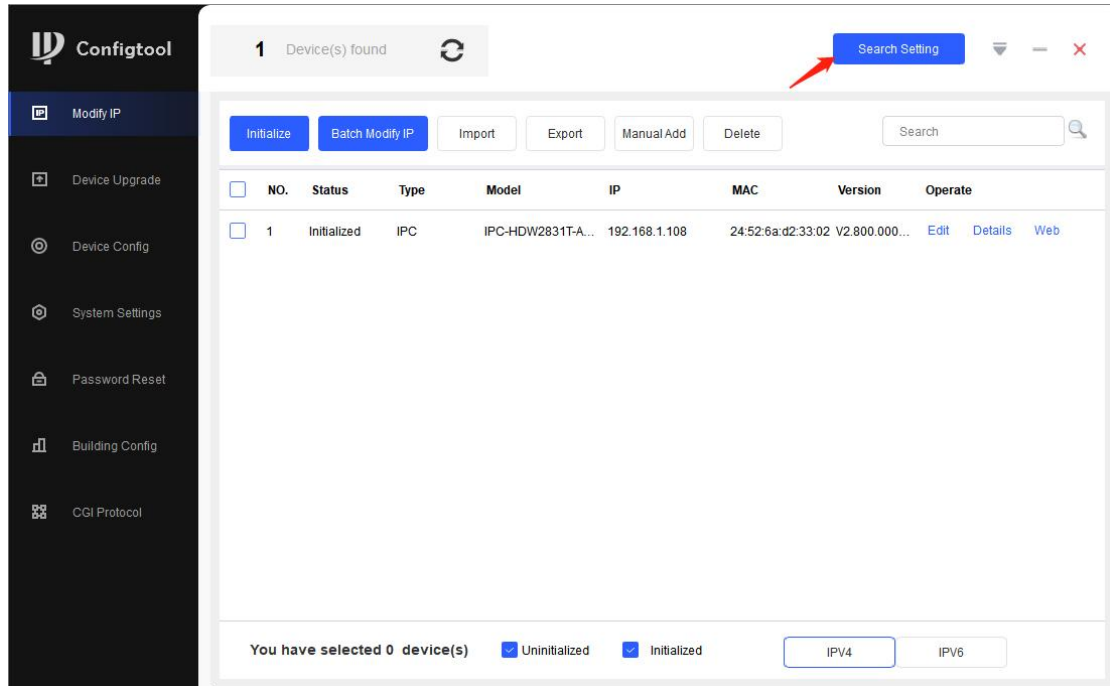

Step 2: enter the camera username and password.

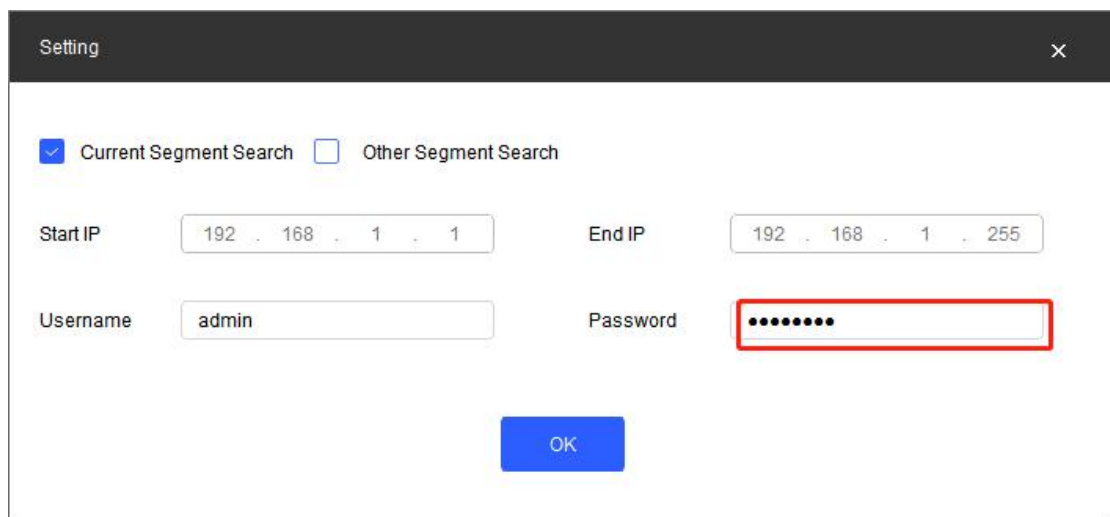


Step 3: Modify the client target IP address, the gateway must be in the same network segment as the target IP address.

The screenshot shows the 'Modify IP' interface in Configtool. A modal window titled 'Modify IP Address' is open, showing the configuration for a device. The 'Mode' is set to 'Static'. The 'Target IP' is '192 . 168 . 254 . 108', the 'Subnet Mask' is '255 . 255 . 255 . 0', and the 'Gateway' is '192 . 168 . 254 . 1'. The 'OK' button is highlighted with a red box and the number 4. The 'Edit' button in the table above is highlighted with a red box and the number 2. The checkbox for the device is highlighted with a red box and the number 1. The IP input fields are highlighted with a red box and the number 3.

NO.	Status	Type	Model	IP	MAC	Version	Operate
1	Initialized	IPC	IPC-HDW2831T-A...	192.168.1.108	24:52:6a:d2:33:02	V2.800.000...	Edit Details Web

You have selected 1 device(s) Uninitialized Initialized

Step 4: The option changed successfully and click “” refresh.

The screenshot shows the 'Modify IP' interface in Configtool after a refresh. The device is now unselected, and the IP address is updated to '192.168.254.108'. A green checkmark is visible next to the IP address. A red arrow points to the refresh icon in the top right corner of the interface.

NO.	Status	Type	Model	IP	MAC	Version	Operate
1	Initialized	IPC	IPC-HDW2831T-A...	192.168.254.108	24:52:6a:d2:33:02	V2.800.000...	Edit Details Web

You have selected 0 device(s) Uninitialized Initialized