




Set the NTP server

1. Open IE browser. Enter camera IP and login in camera web.

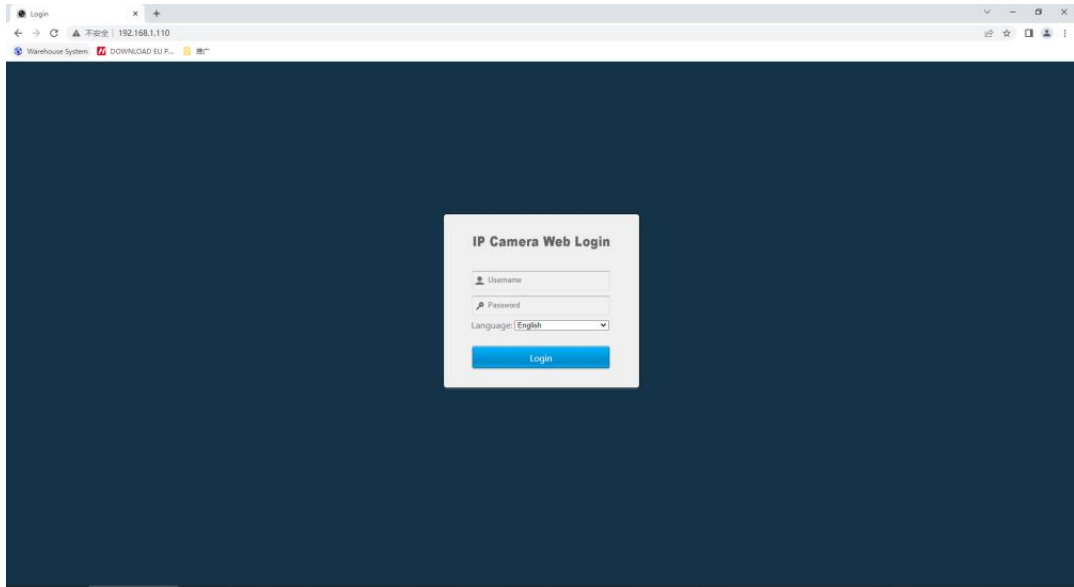

2. Click "Configuration-System-Date & Time-Update Method-NTP".

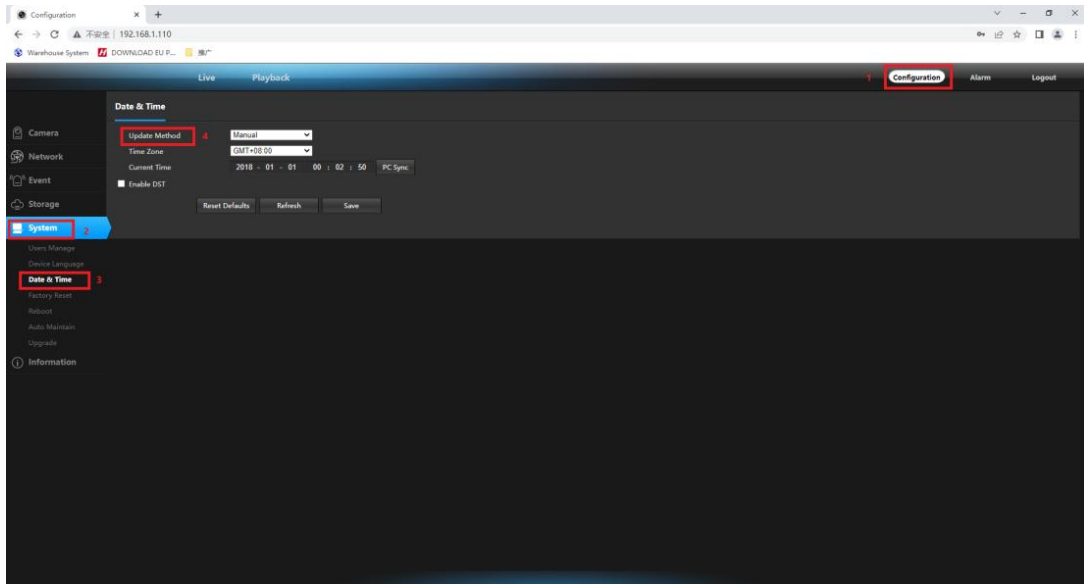

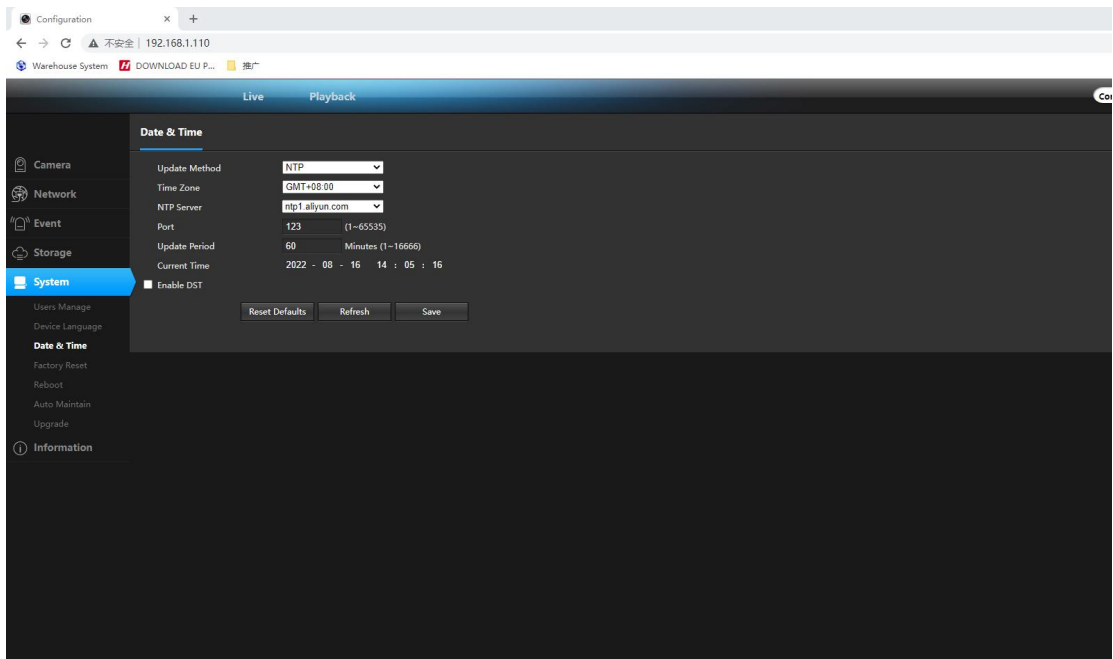

- ① Modify the "Time Zone".
- ② Enter "NTP Server".
- ③ Port default 123.
- ④ Update Period default 60 minutes.
- ⑤ Click "save" to apply.