



PG camera LED brightness setting

1. First connect the camera to the switch (or router) with a network cable, connect the computer network cable to the same switch (or router), download the search software AjDevTools from the computer, search, check the camera and modify the IP address of the computer on the same network segment .

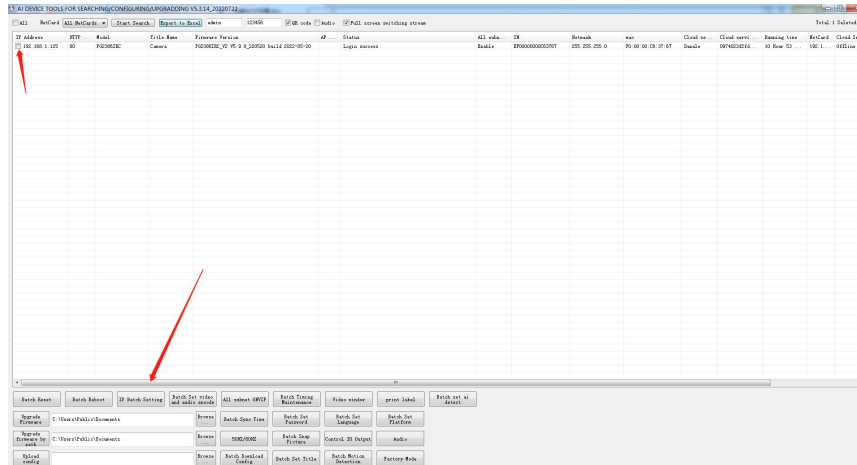

2. Open the browser and enter the IP address of the camera, enter the web login interface, the default user name is admin, and the default password is 123456.

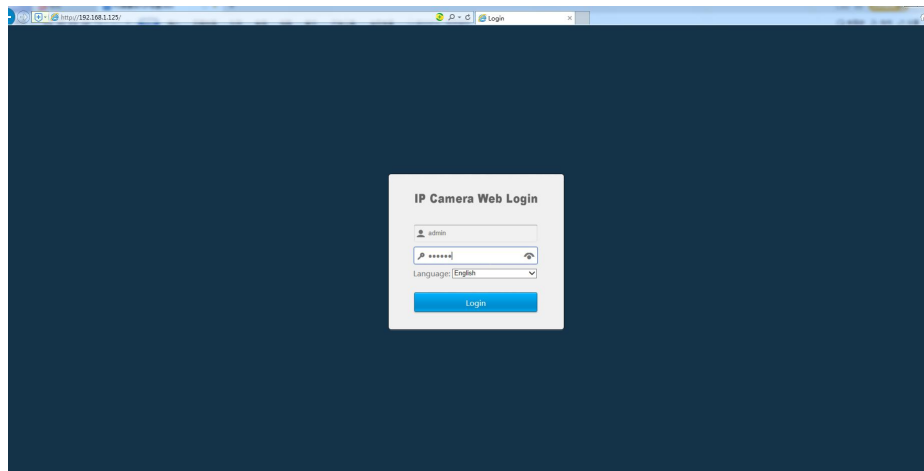

3. After logging in, click Settings - Camera - Graphics - LED Brightness.

