Record Configuration

1. Open the nvr back cover and connect the hard disk to the motherboard and install the hard disk to the back of the nvr





2. Log into the nvr web side and go to the storage page, select the drive and format it.

	Live View	Playback	Picture	Conf	iguration				
) Local	HDD Management	Net HDD	Cloud Storage	Memory Car	rd Detection	1			
System	For the memory	card that is ab	normal or uninitia	alized, insert ag	jain, change a card o	or format the	e card.		
Network	HDD Manager	HDD Management						Parity	Format
Video/Audio	HDD No.	Capacity	Free space	Status	Encryption Status	Туре	Formatting Type	Property	Progress
Image	Z 1	14.73GB	0.00GB	Uninitialized	-	Local	EXT4	R/W	
PTZ								5	
Event 2									
🖺 Storage 🎽	\4								
Schedule Settings									
Storage Management									
3									
	Quota								
	Max.Picture Ca	pacity 0	.00GB						
	Free Size for P	icture 0	.00GB						
	Max. Record C	apacity 0	.00GB						
	Free Size for R	ecord 0	.00GB						
	Free Size for R Percentage of	ecord 0	.00GB 5		%				

3. Set the recording format, if you want the device to be recording all the time, select continuous at 3, and color the timeline green.

