



PTZ Settings on Hikvision NVR Web


1. Go to the Hikvision NVR website, adjust the camera position A, then select Preset point 1

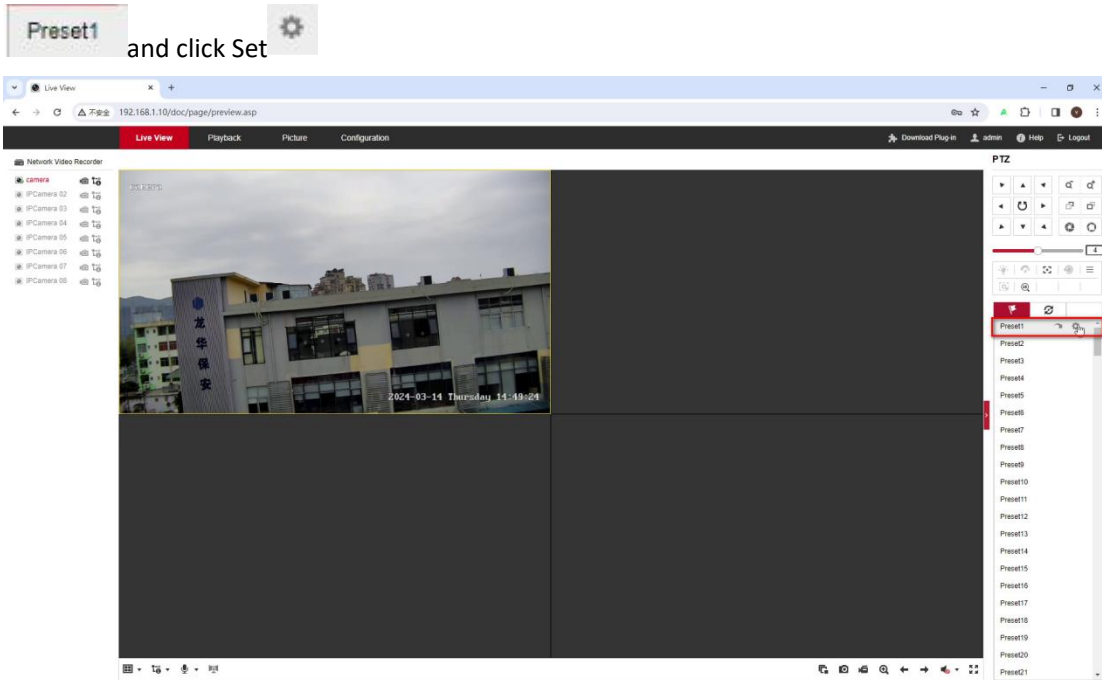


2. Adjust camera position B, select Preset point 2 

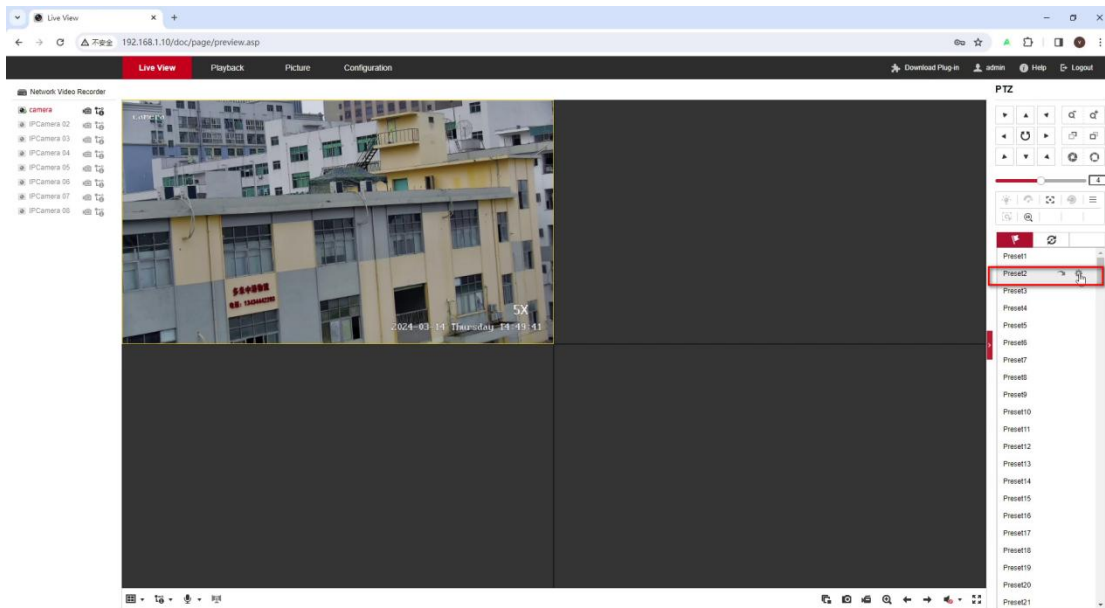

3. Adjust the camera position C, select Preset point 3 

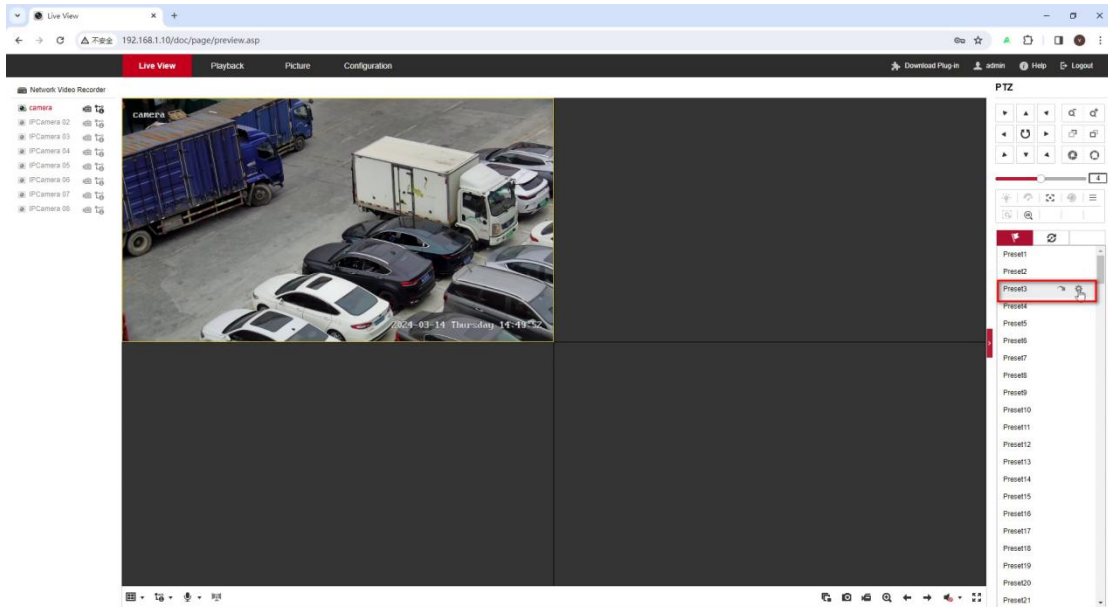

4. Select Preset 41 and click Call. Then it will cruise from position ABC

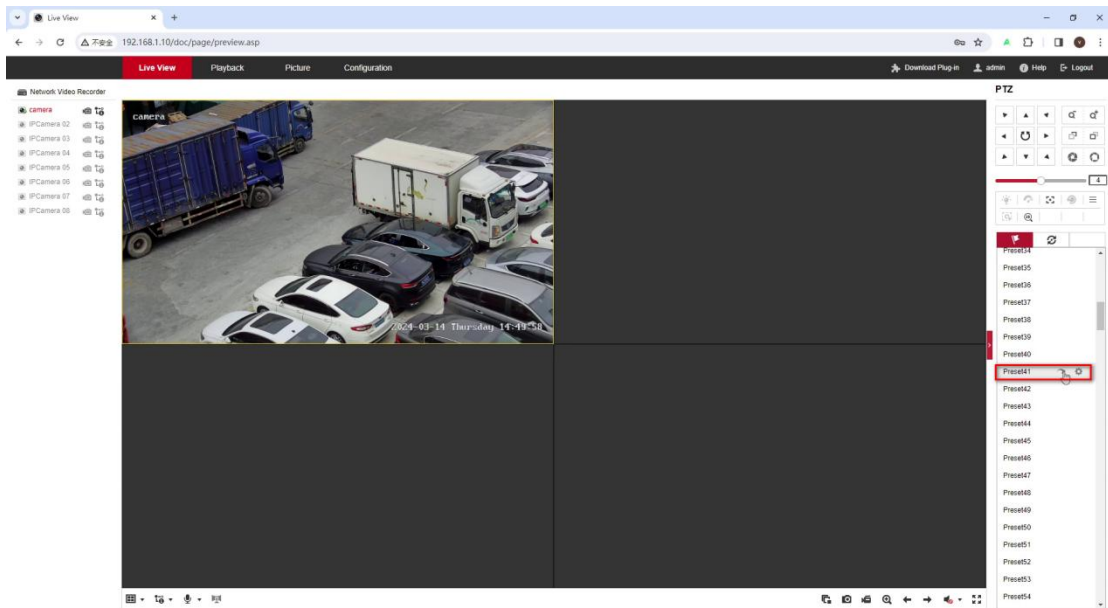

If additional actions are required, please refer to the table below

IP PTZ Function	Command	Comments
Start Sequence Patrol No.1 (Preset:1-32)	Call 41	
Start Sequence Patrol No.2 (Preset:17-32)	Call 42	
Start Sequence Patrol No.3 (Preset:65-80)	Call 43	
Start Sequence Patrol No.4 (Preset:113-182)	Call 44	
Start Sequence Patrol No.5 (Preset:129-144)	Call 45	
Start Sequence Patrol No.6 (Preset:145-160)	Call 46	
Start Sequence Patrol No.7 (Preset:161-176)	Call 47	
Start Sequence Patrol No.8 (Preset:177-192)	Call 48	
Preset dwell time: 4s	Set 51	
Preset dwell time: 6s	Set 52	
Preset dwell time: 8s	Set 53	Default
Preset dwell time: 10s	Set 54	
Preset dwell time: 12s	Set 55	
Auto Tracking: Guard Position	Set 56 or Set 92	
Auto Tracking: Max.Target Tracking time	Set 93 + Set N(N:20-255)	Default:disable
Auto Tracking: Target Lost Return time	Set 94 + Set N(N:1-255)	
Auto Tracking: Start Target Tracking	Call 56 or 92	
Auto Tracking:Start Sequence Patrol No.1 and Search Target for Tracking	Call 57 or 93	
Auto Tracking:Disable Auto Tracking	Call 58 or 94	Default:disable
Start 360°Pan Scan	Call 96 or 100	
Start A to B Scan	Call 38	
Disable A to B Scan	Set 38	
Set A-B Scan Left Position A	Set 35	
Set A-B Scan Right Position B	Set 36	
Set A-B Scan rotate speed	Set 60 to 64: 3°,6°,9°,15°,40°/sec	
Enable Idle Action	Call 105 enable	
Disable Idle Action	Set 105 disable	Default:disable