PG camera setup automatic tracking

A. Connect the camera.

- (1) The camera is directly connected to the computer and provides DC12V power supply for it.
- (2) Connect via POE switch.
- (3) Connect via router.



AjDevTools

B. Download and open the camera search tool.

Download: http://ourdownload.store/

P Address	HTTP Port	Model	Title Name	Firmware Version	AF V.		
192.168.1.14	80	YM800SV2_YPTZN_Y3	Camera				
192.168.1.14	80	PG2558I	PG2558I	YM800SV2_YPTZN_Y3_AF_V3-A_Y_EN-RTMP-H5_L V PG2558I_AF_V0-A_NH-RTMP-DH-H5 V3.2.5.4 build 2 YMA81_IR_N_AF_V0-A_Y_EN-RTMP-H5_L V3.3.1.5 b			
192.168.1.12	80	YMA81 IR N	YMA81 IR N				
	00		INNOI_IN_IN				

Check whether the camera's IP is in the same network segment as the computer's IP. If it is different, modify the camera IP to be in the same network segment as the computer.(the first three digits of the camera's IP address are the same as the computer's IP address, and the last digit is different.)

C. Open the IE browser, fill in the camera IP address, fill in the camera account password, and download the plug-in preview (Need to close the browser when installing the plug-in to

prevent the plug-in installation from being unsuccessful)

1. The initial account is admin and the password is 123456.

		Language: English 🗸 🗸
	IP Camera Web Login	
0	Password	

2. Check whether the human detection function is turned on.

Live Play	back Alarm	Configuration					
	Intelligent Detection						
CameraNetwork	Concra			Select Detect Target	 Human E-bike 	☑ Car ■ Bicycle	 Motorcycle Fire
4∲ PTZ			K.	Day Night	Enable Enable	~	
Motion Detect				Draw Rect In Video Target Detection Rect Day Sensitivity	Enable Enable	► ► 50	
Intelligent Detect Video Cover Alarm Storage				Detection Rect Blink Light Blink	Disable Disable Disable	~	
System (i) Information		2014-13-141 E	1.11 18432.465	Trigger Audio Trigger Output 1 Upload Alarm Center 	Disable	~	
U				 Trigger Recording Trigger Snapshot 			

3. Click "Live" and select "Enable Auto Tracking" from "Advanced Shortcuts".

